


Blade Welding Guide

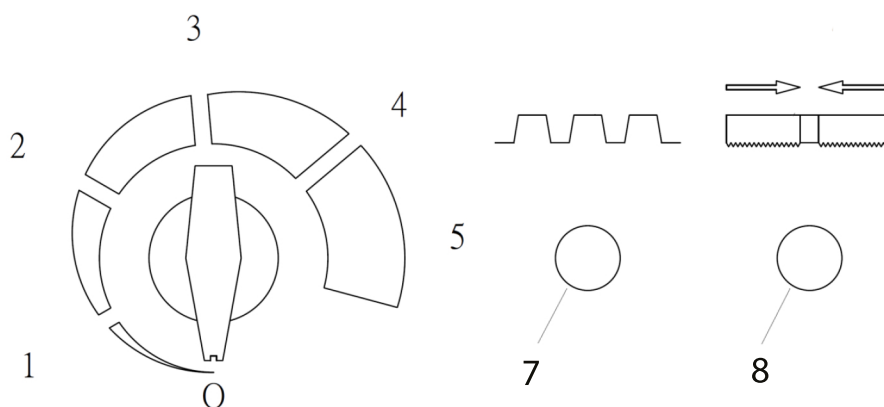

ITEM	BLADE WELDING PRESSURE ADJUSTMENT
1	Section 0-1 for blade width of 3-6mm
2	Section 1-2 for blade width of 6-8mm
3	Section 2-3 for blade width of 8-10mm
4	Section 3-4 for blade width of 13-16mm
5	Section 4-5 for blade width of 16-20mm
7	Temper Button
8	Welding Button