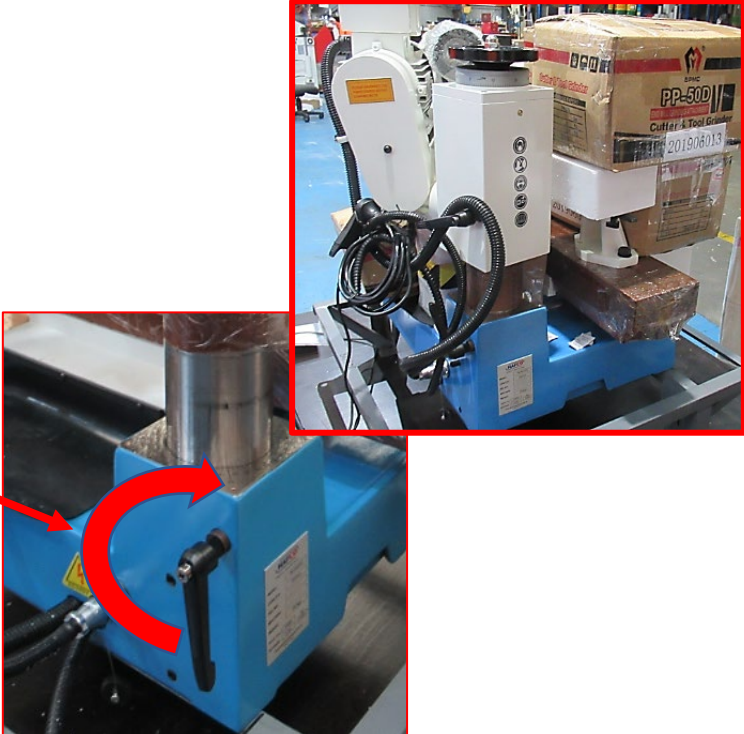
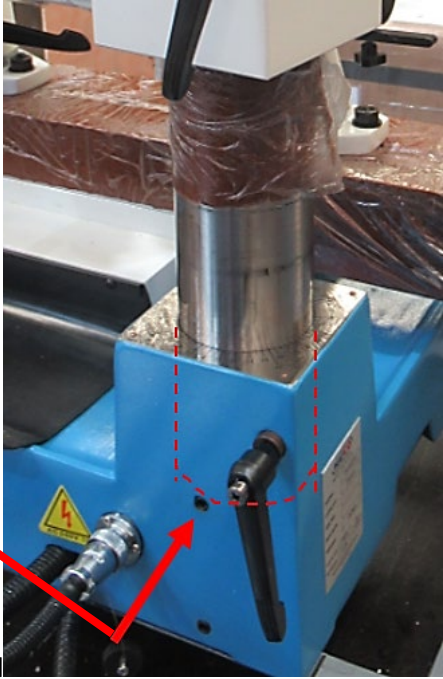


# G198 TM6025Q tool and cutter grinder

## extra customer instructions

2-8-19

To be used in conjunction with factory manual

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| <p><u>Page 4 of Manual</u></p> <p>1. <u>location and lifting</u><br/>please note; machine comes with main column lowered in base.</p> <p><b>WARNING</b><br/>Before lifting machine as per manual instructions with sling,</p> <p>ensure the column is securely locked in the base.</p> <p>To do this, tighten the ratchet lever at the rear the machine to clamp column from sliding out.</p>                                                                                                                                                                                                   |   |
| <p>After machine is set up in place.</p> <p>Please note column/grinder assembly can be lifted higher into a second operation position.</p> <p>The position used, depends on the job at hand.</p> <p>With assistance due to the weight of the column/grinder assembly .<br/>Undo the ratchet lever and the assembly should be able to swivel freely.<br/>It can also be lifted up in base to its higher position.<br/>To do this, slide it up above the top position grub screw.<br/>Then screw the grub screw in to stop the column sliding back down.</p> <p>Tighten up the ratchet lever.</p> |  |