


AP-1


1 TONNE - ARBOR PRESS

BASE DIMENSIONS

4 - POSITION ANVIL

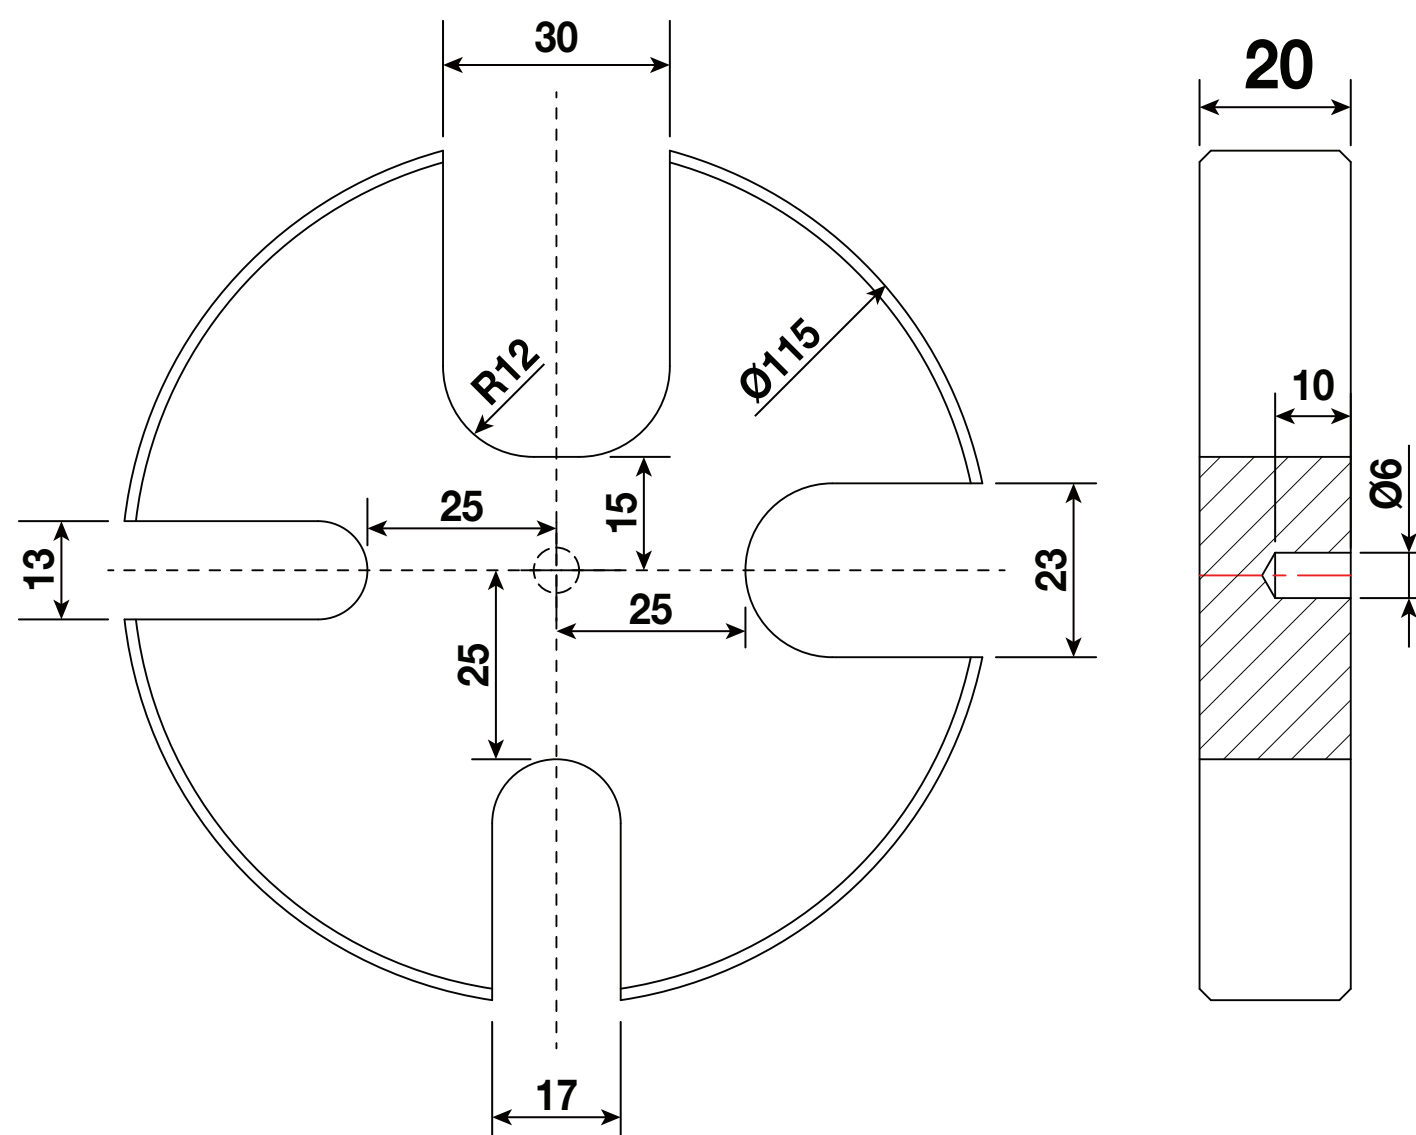

NOTE:
Use High tensile bolts, flat washers
and lock nuts (Not supplied)

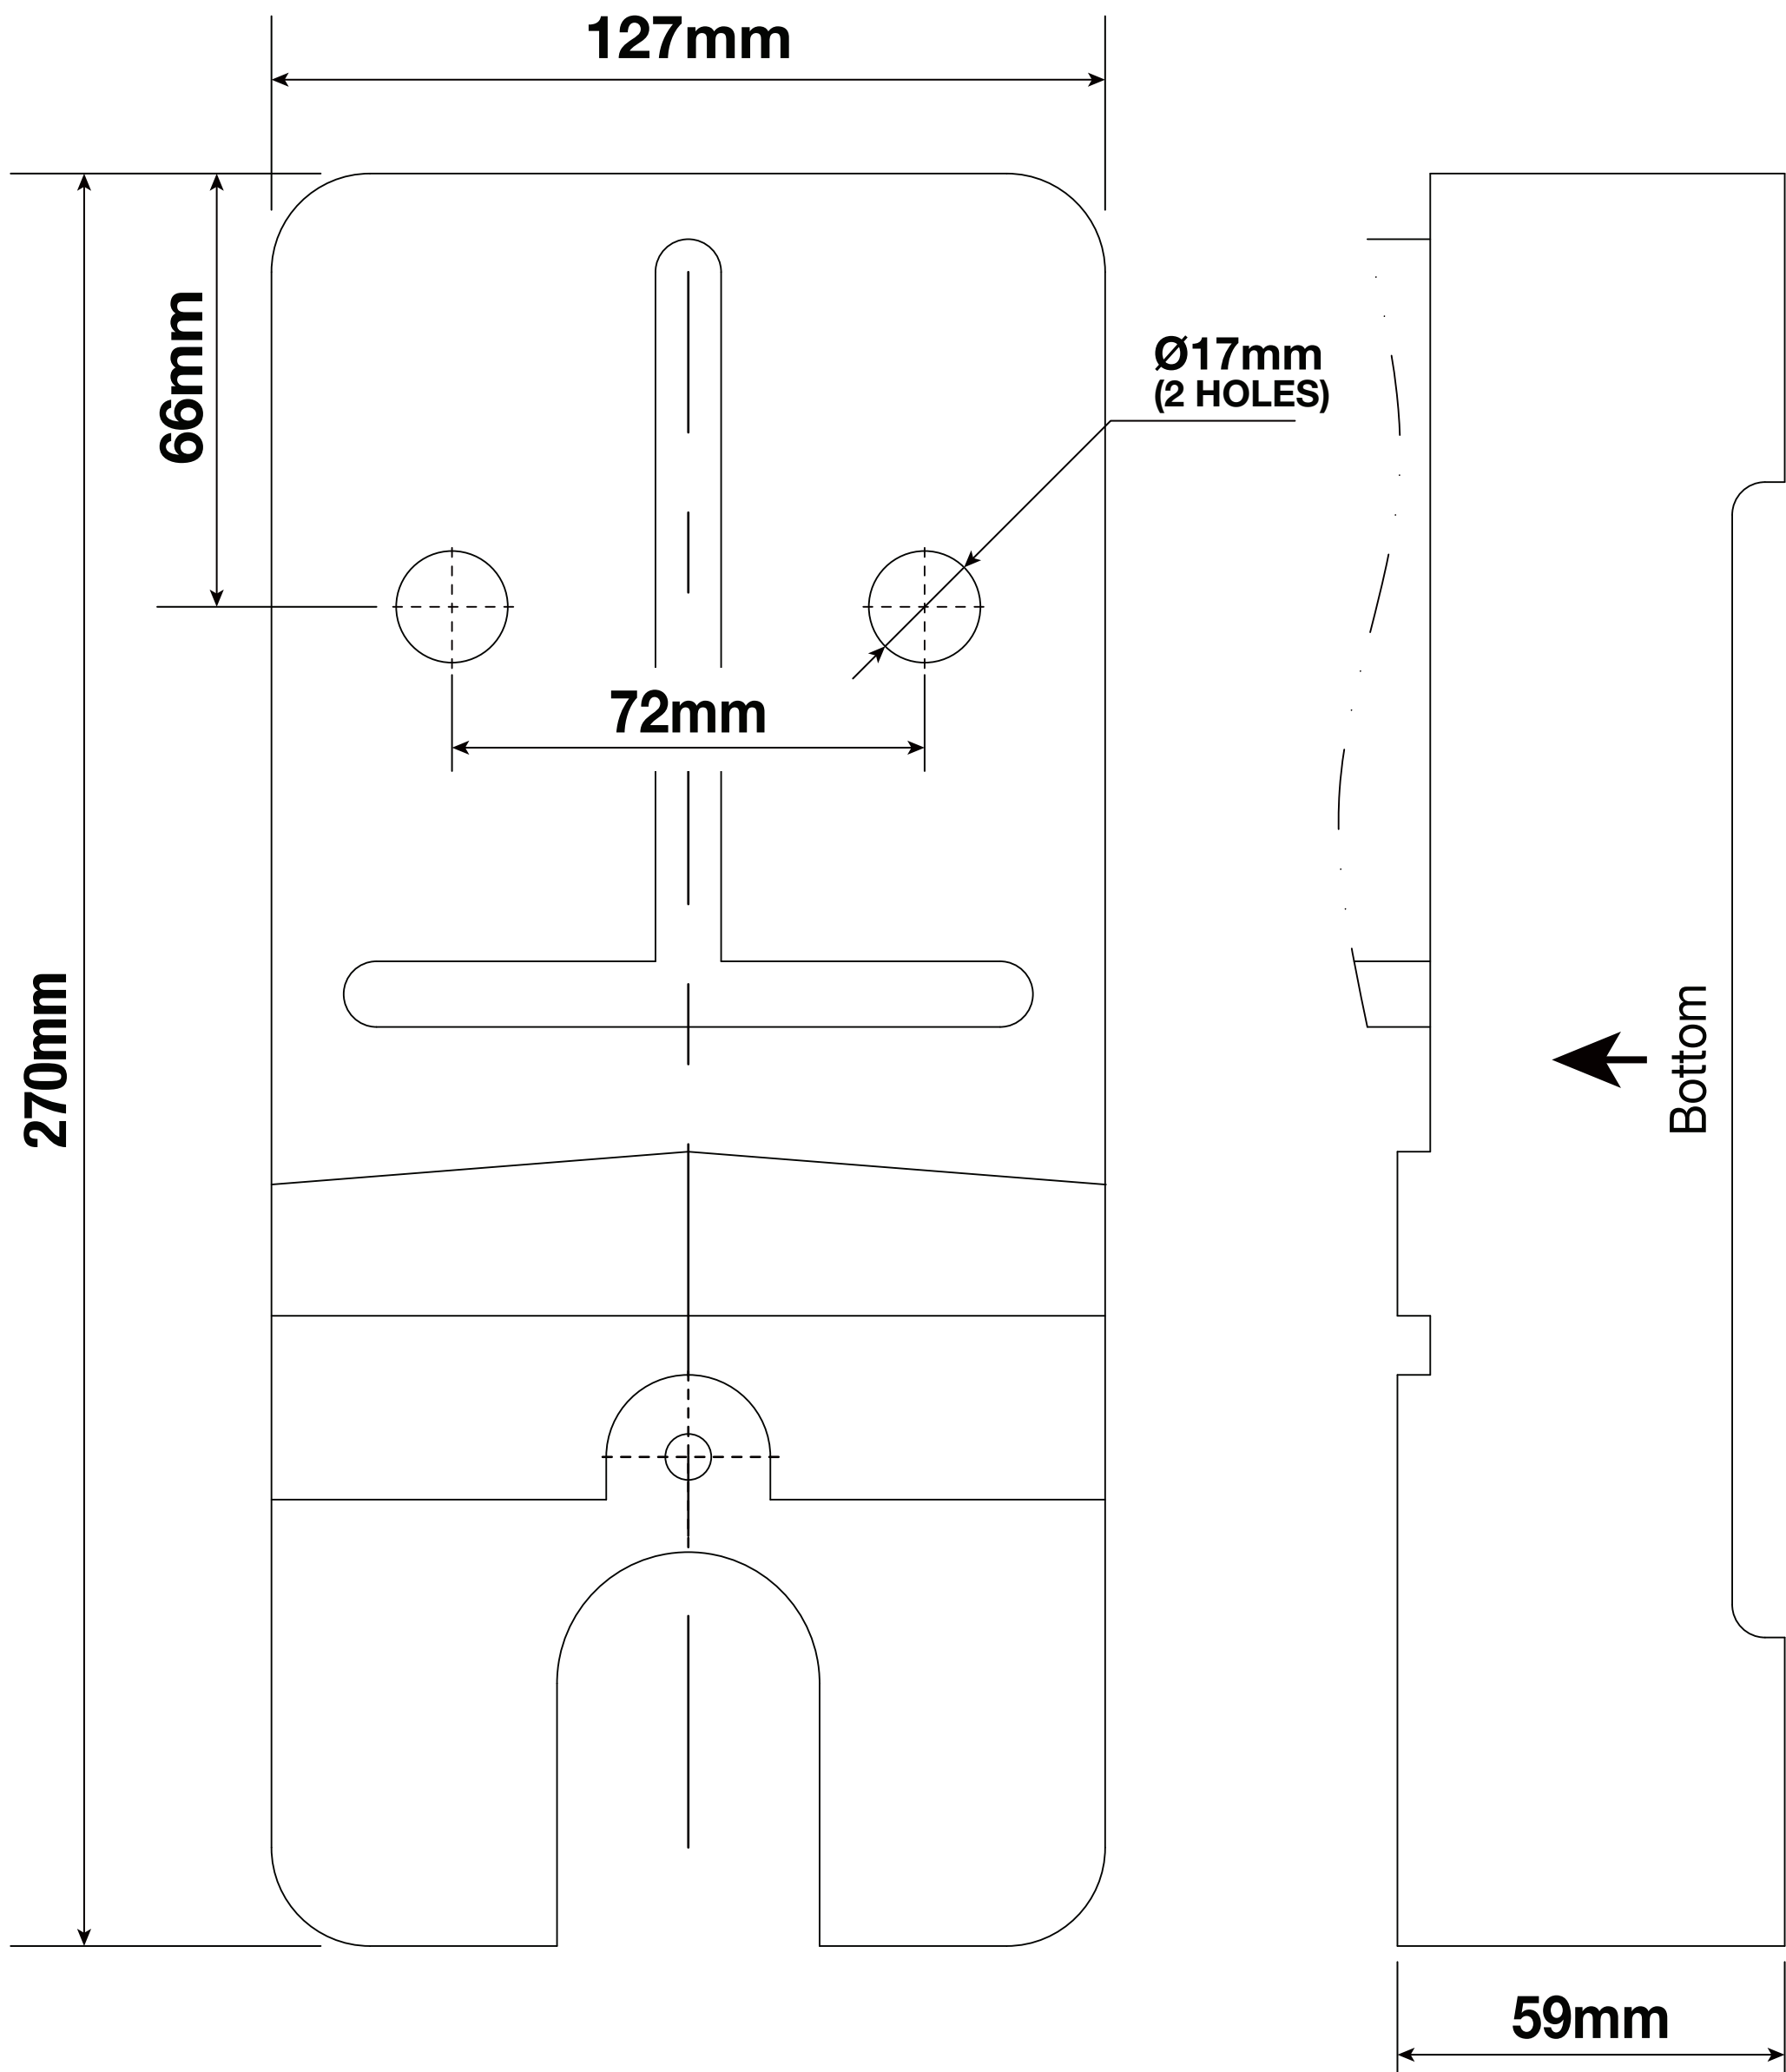

All dimensions are in millimetres (mm)