
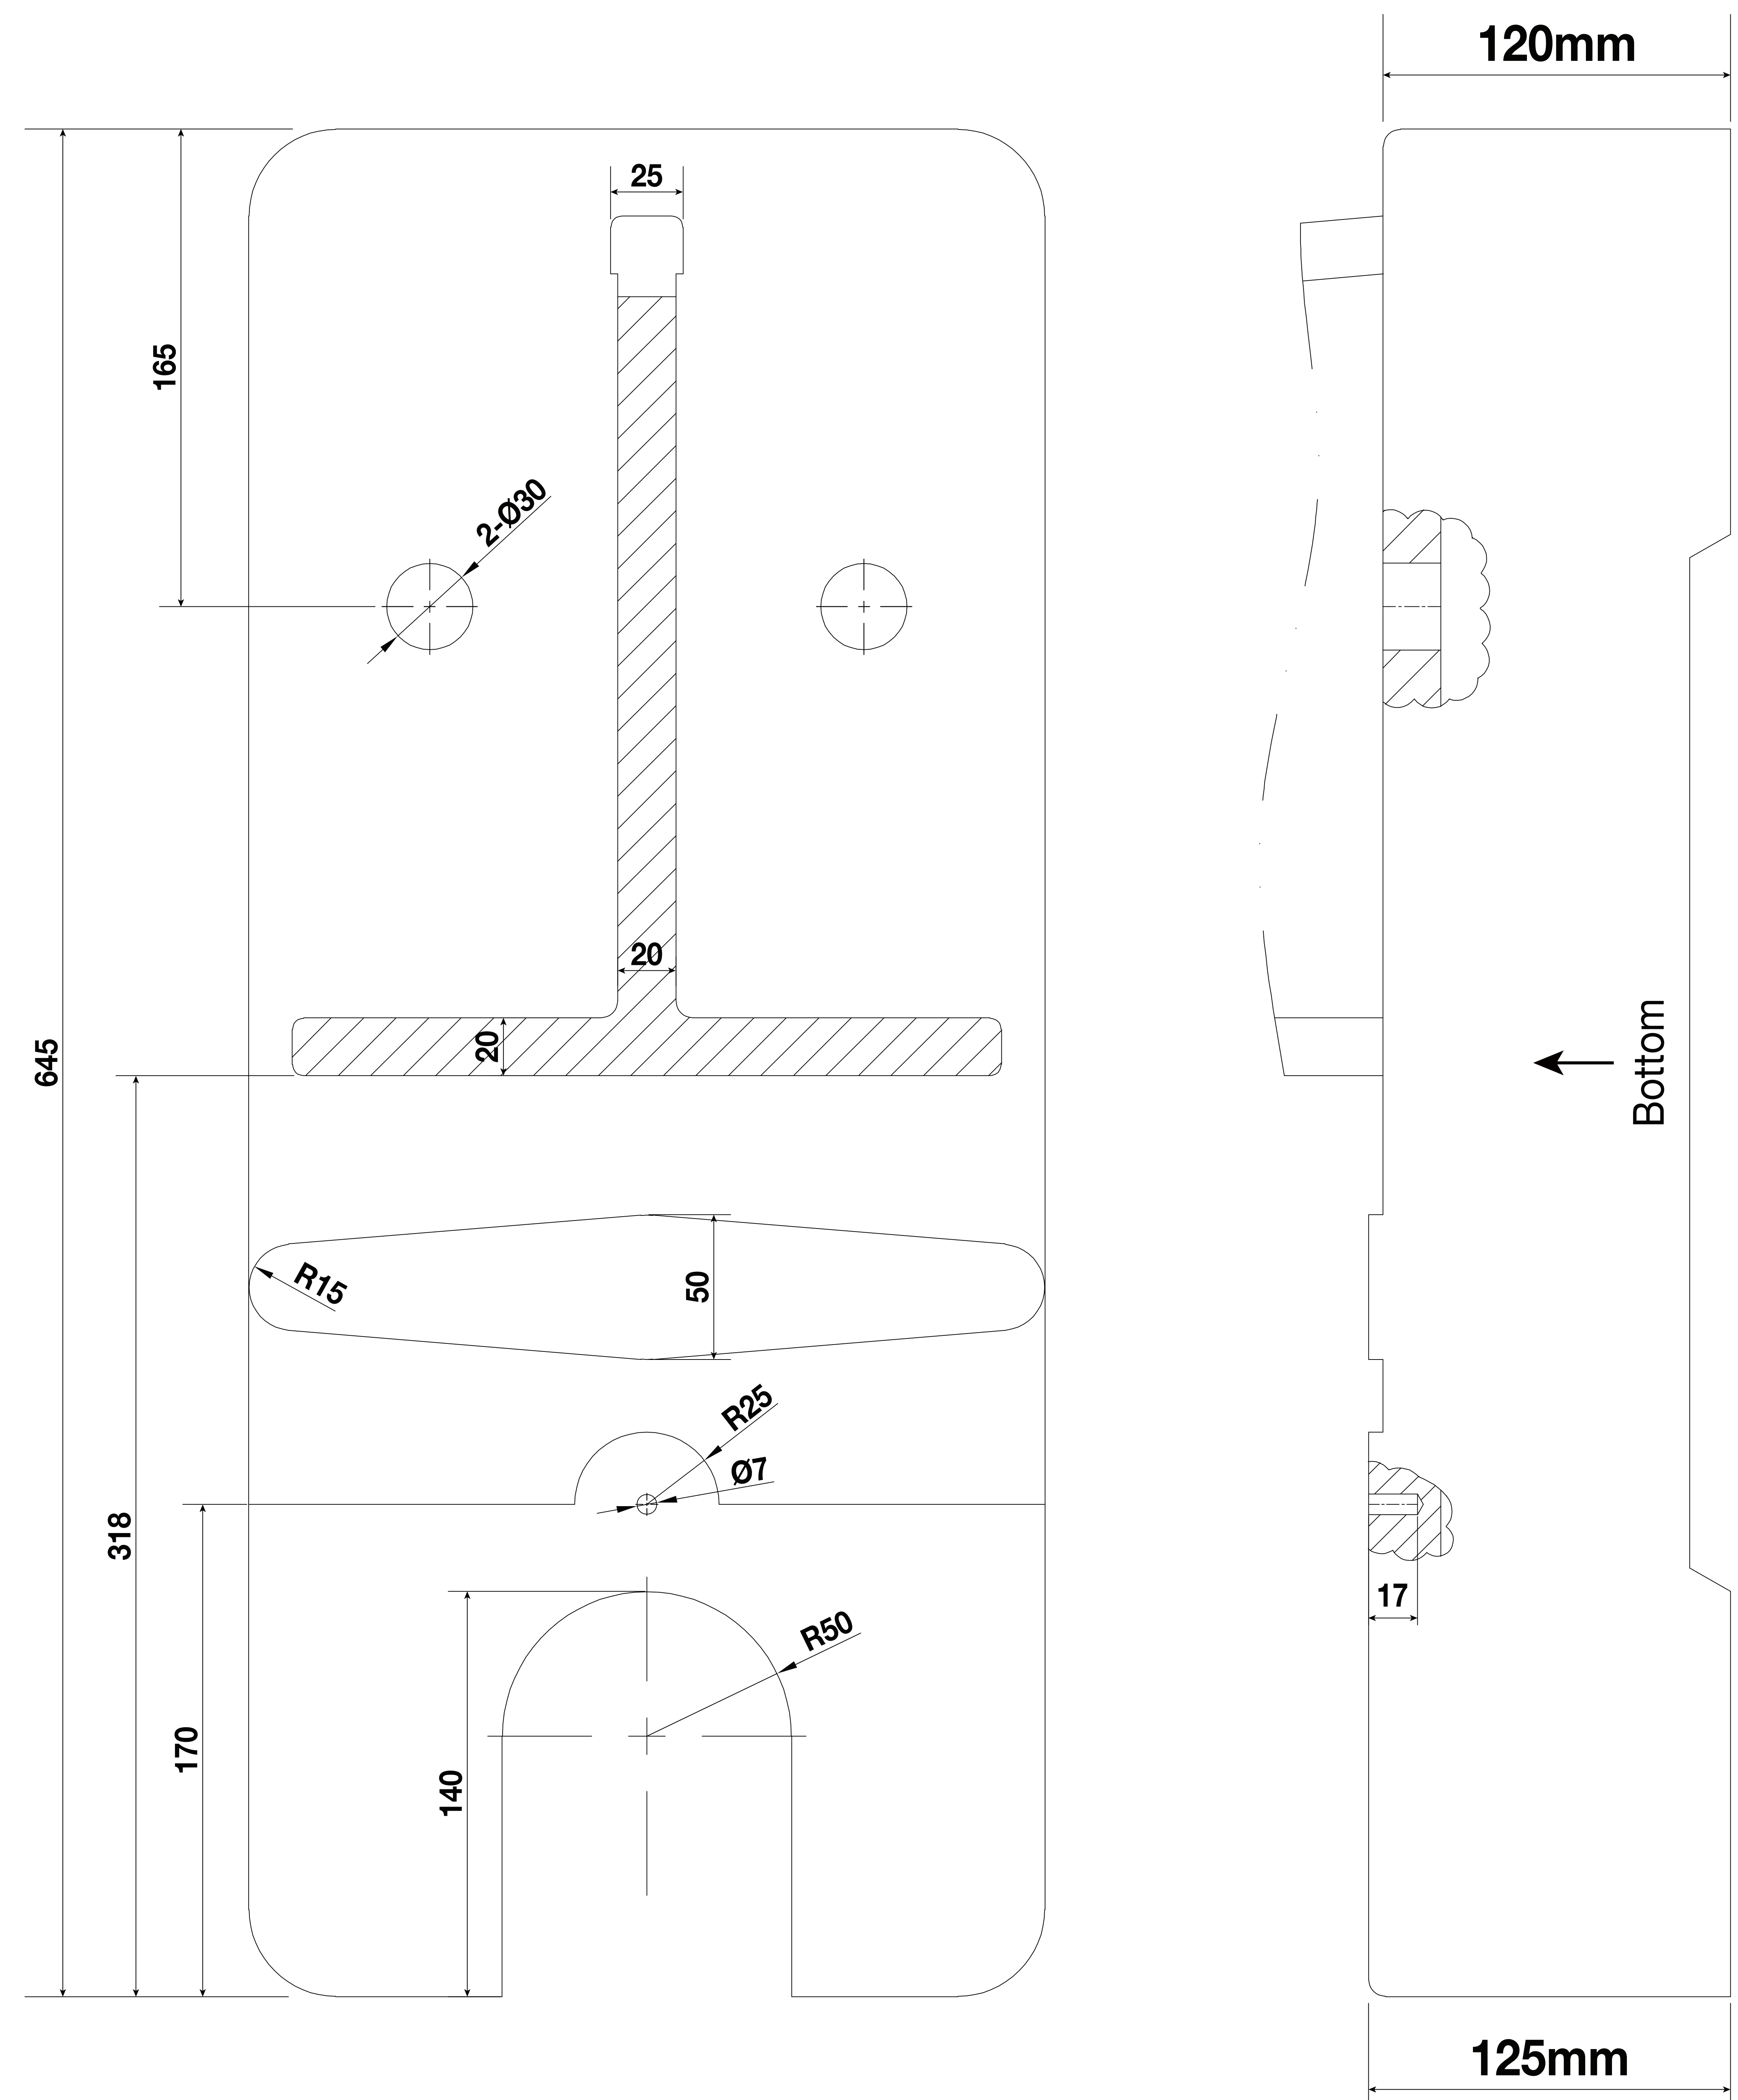


AP-5

5 TONNE - ARBOR PRESS

BASE DIMENSIONS

4 - POSITION ANVIL

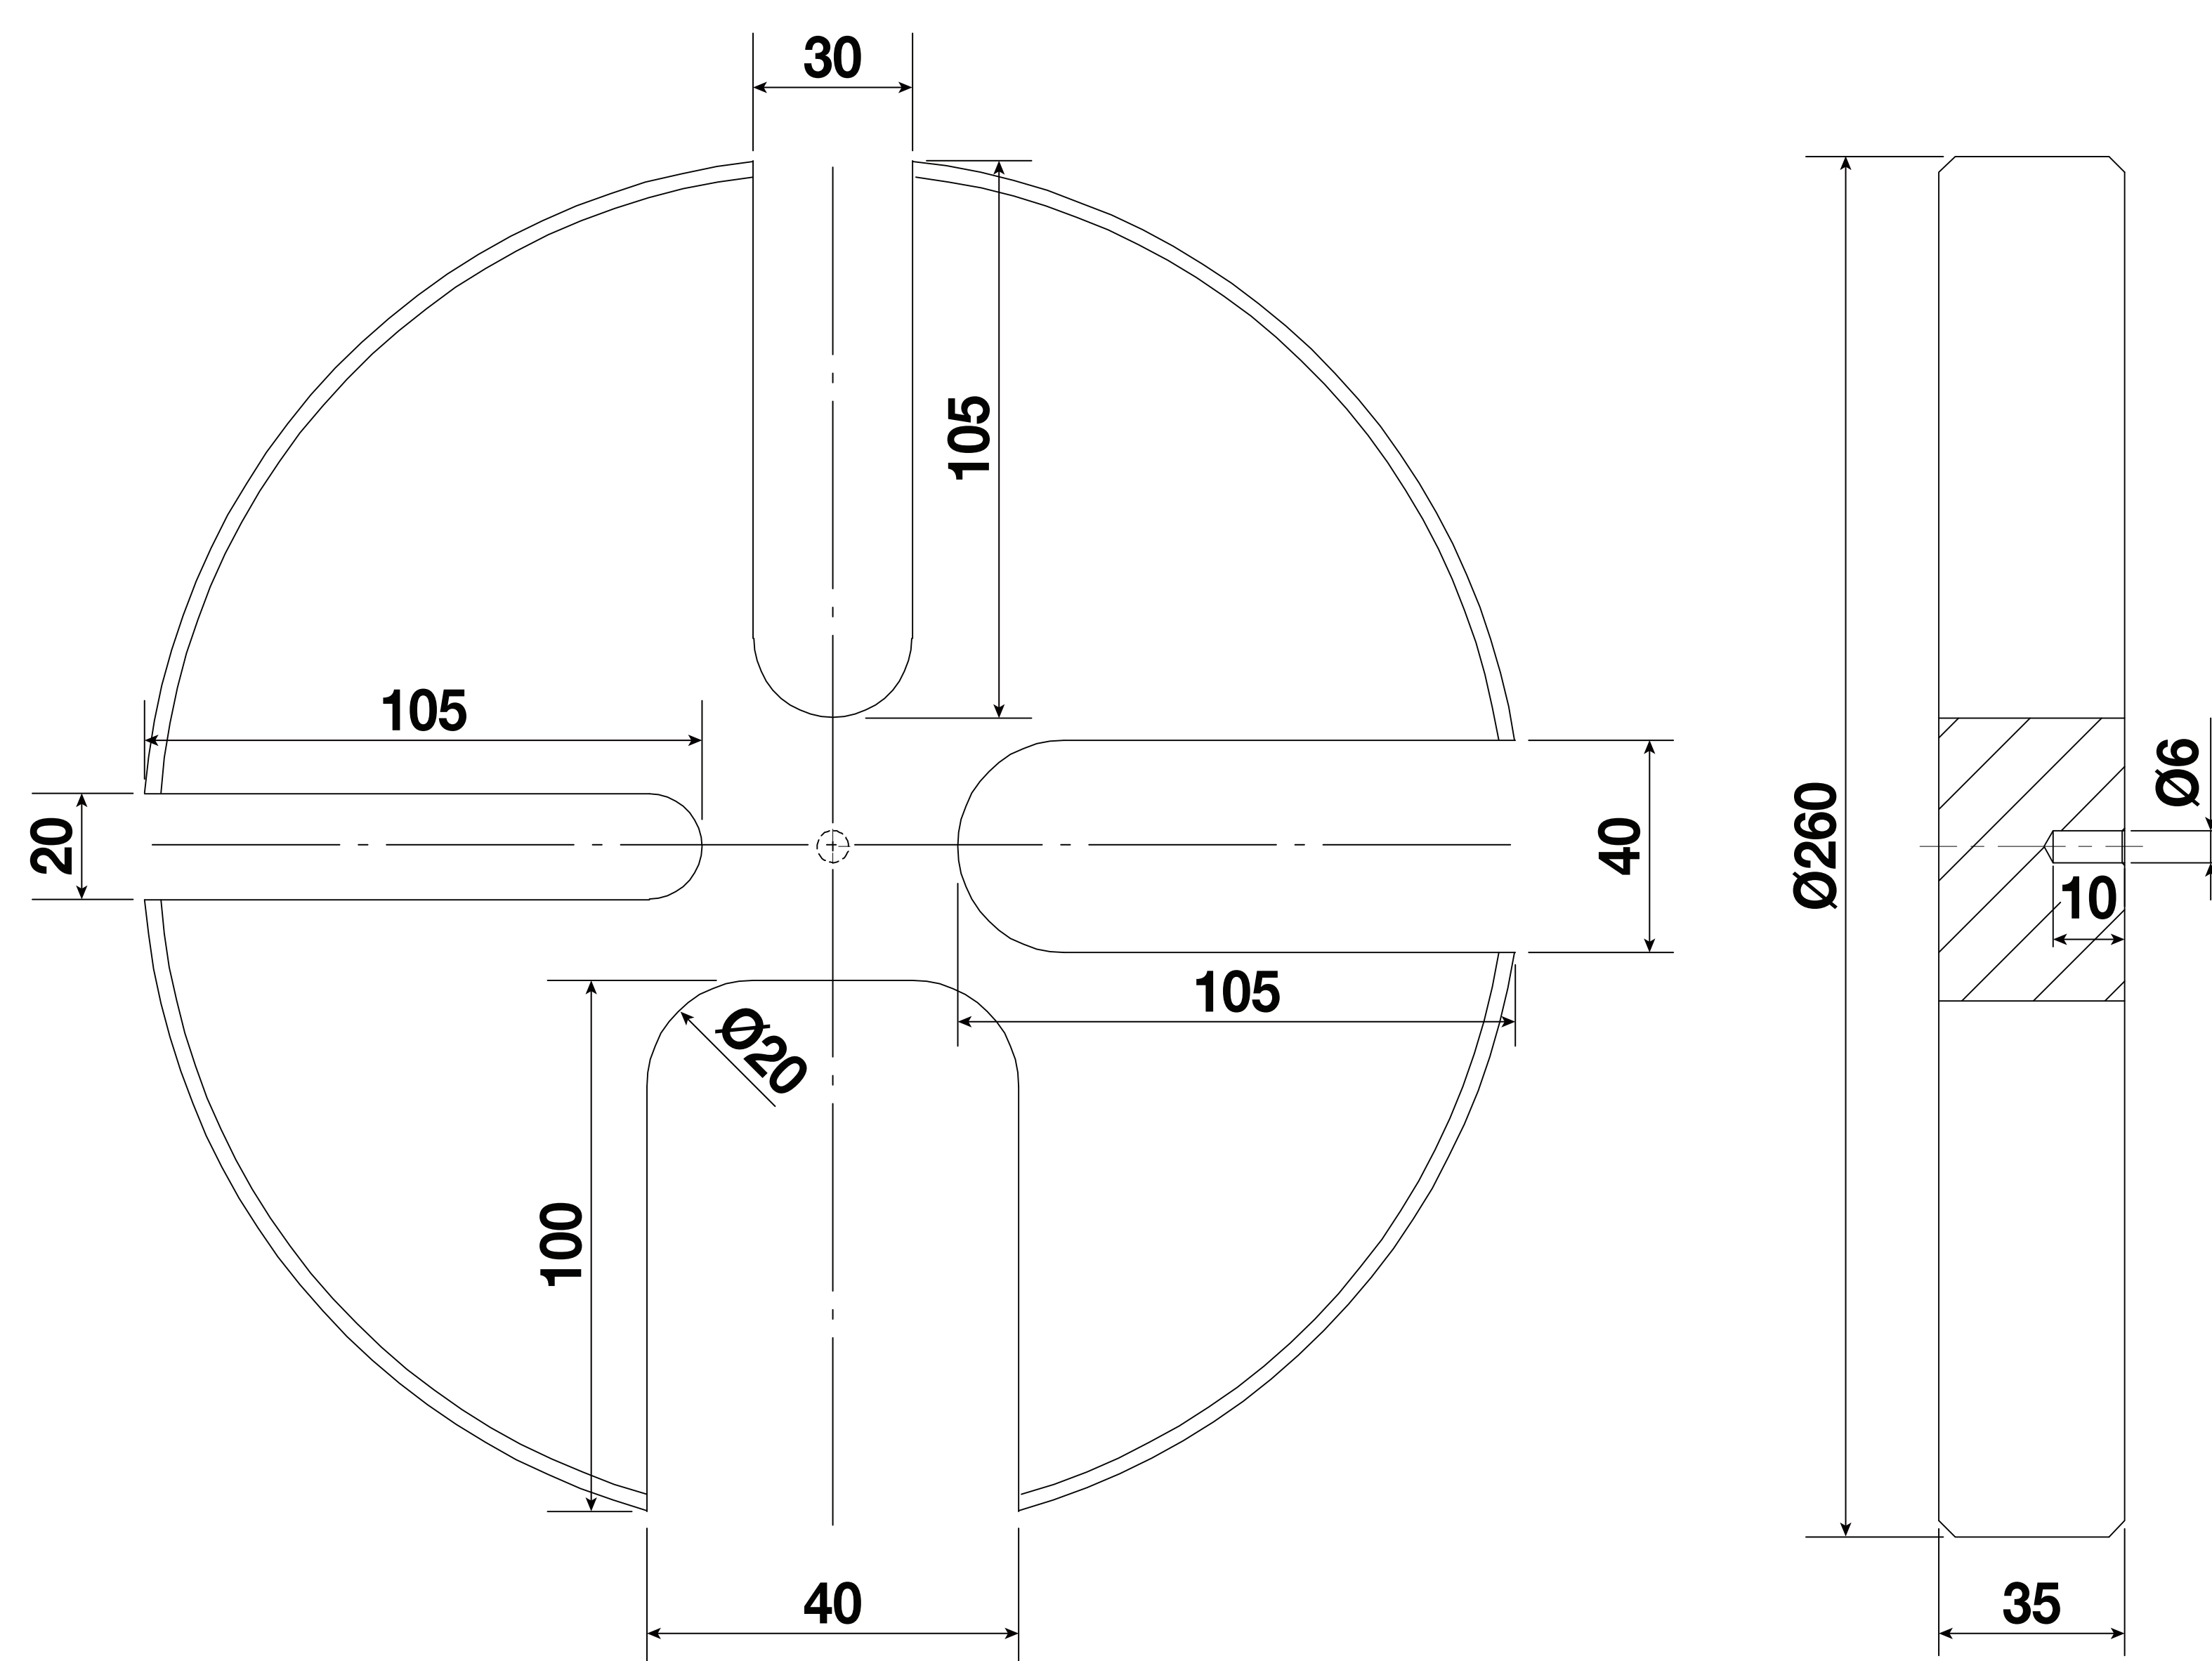

NOTE:

Use High tensile bolts, flat washers and lock nuts (Not supplied)

All dimensions are in millimetres (mm)