



Edition : 1.0
Date: (06/24)


Instruction Manual

2 x DRAWER SYSTEM

RSS-2D


(Suits RSS-4WS Industrial Steel Shelving)

Order Code: (S014D)

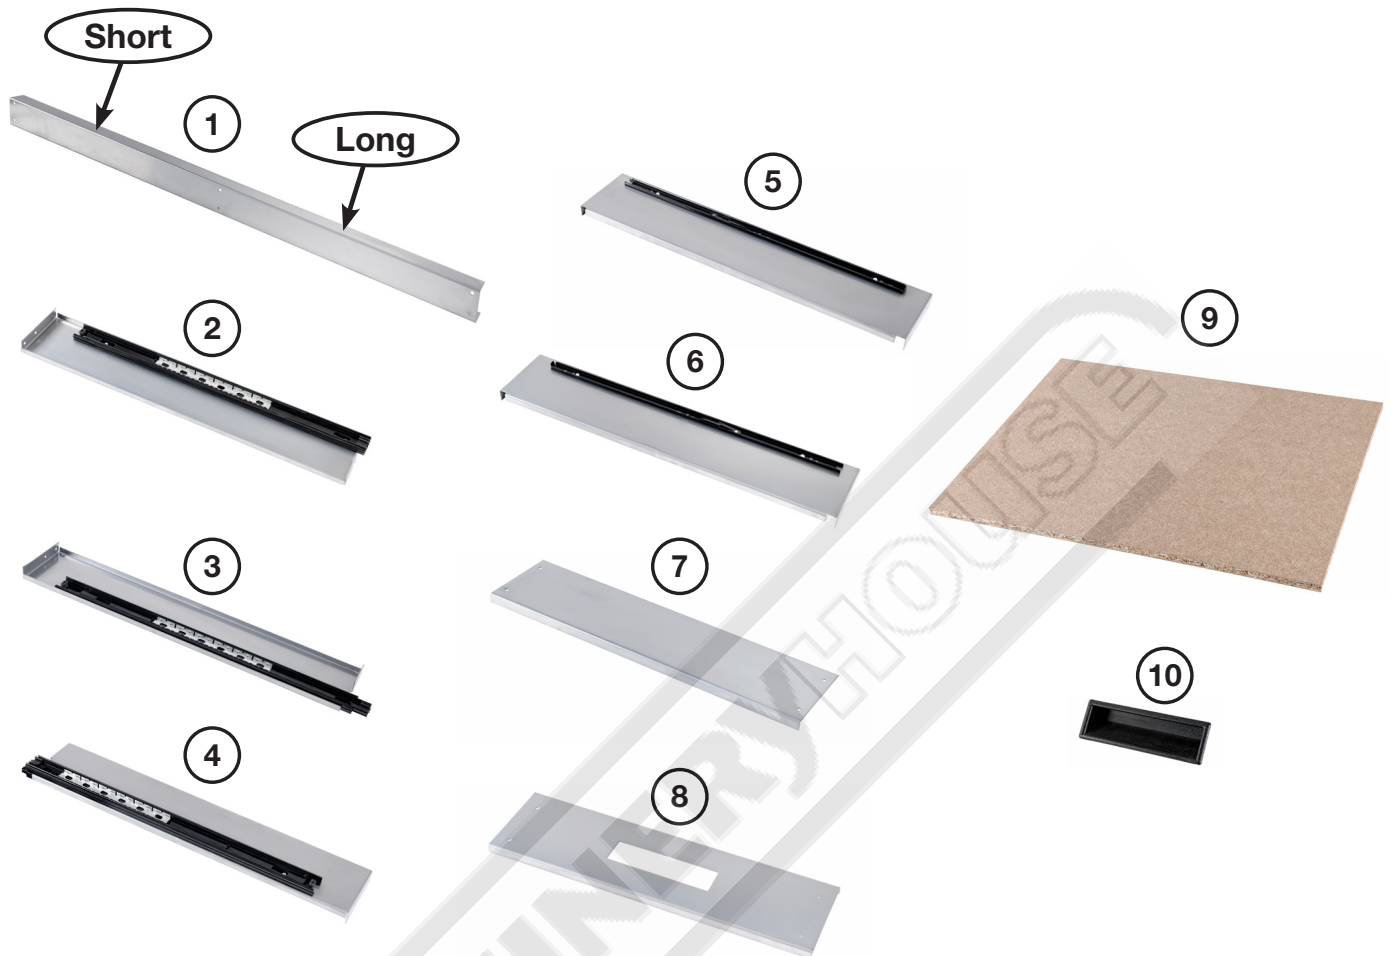


Part No.	Description	Qty
1	Front & rear beam connector	2
2	Left drawer slide system	1
3	Right drawer slide system	1
4	Central drawer slide system	1
5	Drawer side panel (left)	2
6	Drawer side panel (right)	2
7	Drawer back panel (rear)	2
8	Drawer front panel (exterior)	2
9	Drawer bottom (Particle board)	2
10	Panel plastic handle	2

Spare parts: M4x10 Screws & Nuts (28pcs)

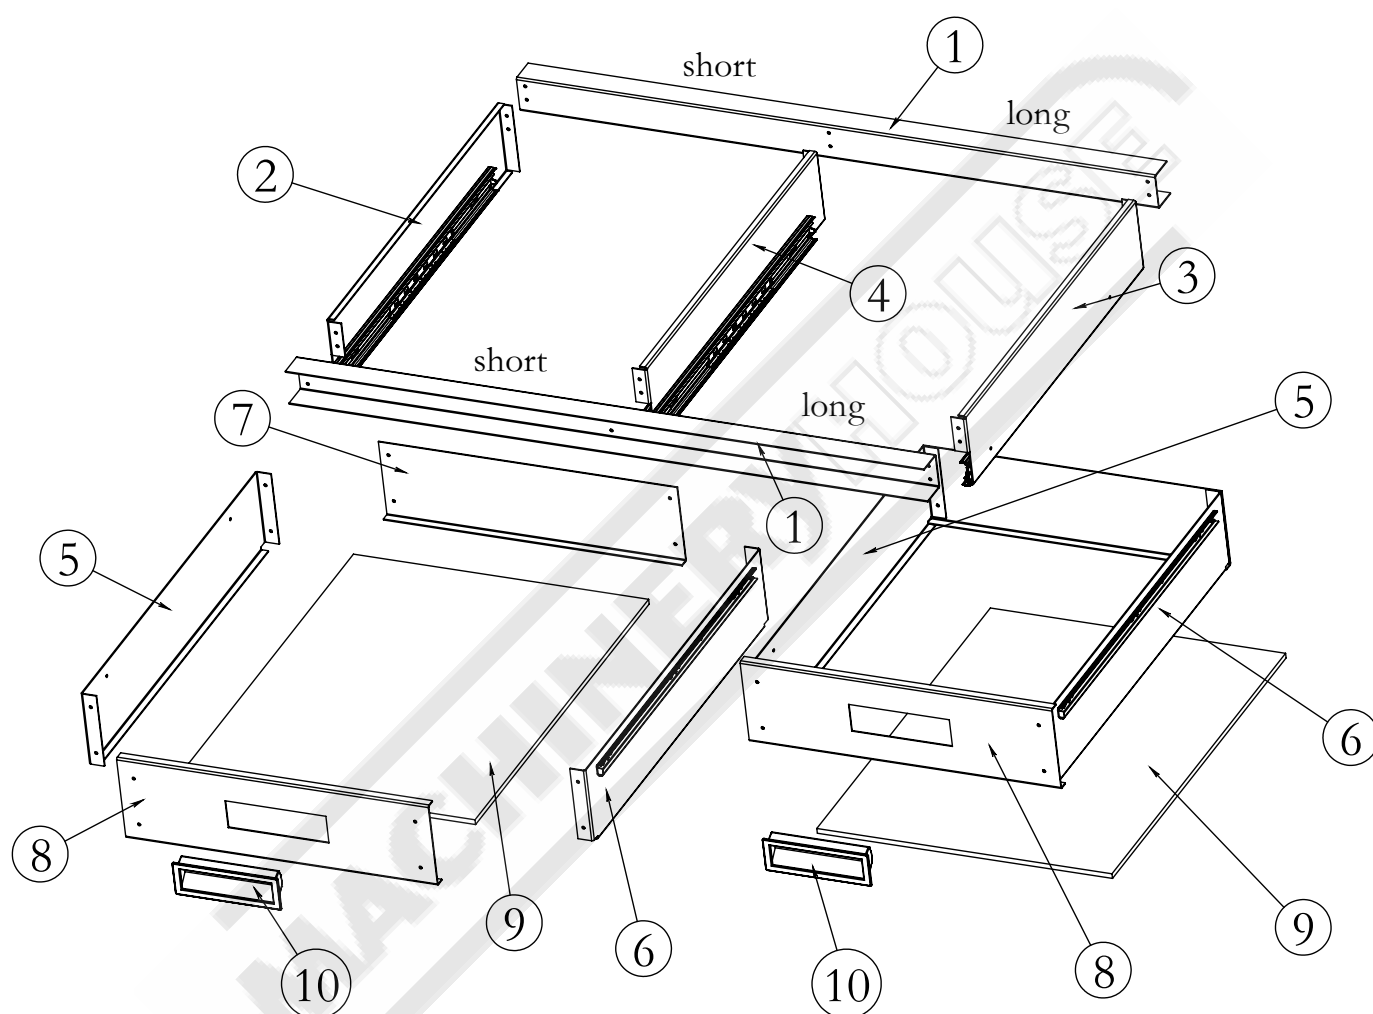

Step 1: Assemble the two Front & rear beam connectors (#1) with the openings facing outwards.

NOTE: Align the short ends with each other and the long ends with each other.

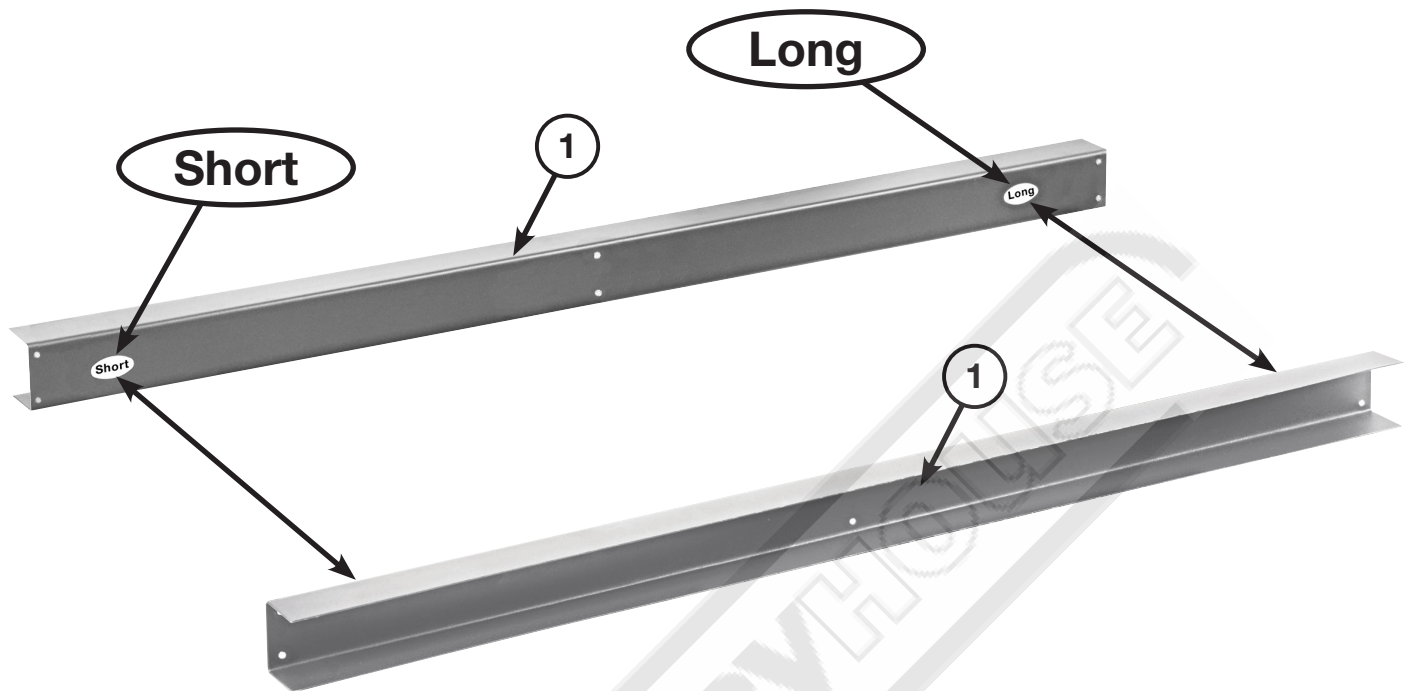

Step 2: Connect the Left drawer slide system (#2) to the Front & rear beam connectors (#1) short ends.

Step 3: Connect the Central drawer slide system (#4) to the middle of the Front & rear beam connectors (#1) and buckle it to the Left drawer slide system (#2).

Step 4: Connect the Right drawer slide system (#3) to the Front & rear beam connectors (#1) long ends.

Step 5: Connect the Left Drawer side panel (#5), Right Drawer side panel (#6), and Rear Drawer side panel (#7) for both drawers.

Step 6: Place the Particle board Drawer bottom (#9) between the Left Drawer side panel (#5), Right Drawer side panel (#6), and Rear Drawer side panel (#7) for both drawers.

Step 7: Connect the Exterior Drawer front panel (#8) to the Left Drawer side panel (#5) and Right Drawer side panel (#6) for both drawers.

Step 8: Insert the Panel plastic handle (#10) into the Exterior Drawer front panel (#8).

Step 9: Insert the assembled drawers into the drawer frame.

To facilitate easy assembly we recommend having two people assemble the drawer unit. When assembling the drawer, you have to stand in front of the drawer, not behind it.

NOTES:

MACHINERYHOUSE



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Imported by

HARE & FORBES
MACHINERYHOUSE

Australian Distributor

Hare & Forbes
Machineryhouse
Sydney - Melbourne
Adelaide - Brisbane - Perth

Ph: 1300 202 200
www.machineryhouse.com.au

MACHINERYHOUSE

New Zealand Distributor

Machineryhouse
Auckland
Christchurch

Ph: 0800 142 326
www.machineryhouse.co.nz