




Gas Struts

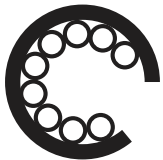

Ball Bearing Slides



Latch Lock Drawers



Firm Close Drawers



Key Lock



Edition : 1.0
Date: (1/25)

Instruction Manual

DELUXE SERIES

STEEL SERVICE CART

SDC-5E

Order Code: (T755)

STEEL SERVICE CART

DELUXE SERIES



BEFORE ASSEMBLING

Please read this instruction manual before assembly.



CAUTION

Before assembly please pay attention to the following points in priority;

Confirmation of components: Before assembling, please confirm all parts arrived and are in good order.

Site for assembly: Please assemble it on the soft floor such as smooth carpet and flannel blanket. When you assemble on wooden floor, please put thin towels on the floor.

Points for attention when assembling: Please wear gloves to ensure that it can be assembled safely, and use two persons to help in the assembly process.

SAFETY INFORMATION

1. Do not pull this service cart, push it when moving.
2. Engage both brakes when this service cart is not being moved. This prevents the service cart rolling away.
3. Secure this service cart properly before moving with a forklift.
4. Do not tow this service cart with power equipment.
5. Do not alter this service cart in any manner. For Example. Do not weld external lock bars or attach electrical equipment.
6. Before locking the service cart, ensure the drawers are completely closed in order for the lock bars to work properly.



CAUTION: Do not attach or mount this product to a vehicle. This may cause personal injury or product damage. Mounting this product to any vehicle in any manner will void warranty.



CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an un-level surface, which may cause personal injury or product damage.



CAUTION: Do not stand on this product. You may fall which may cause personal injury or product damage.



CAUTION: Lock the drawers before moving this product. The drawers could come open and make the product unstable and tip, which may cause personal or product damage.



CAUTION: Be careful when opening more than one drawer. The product may become unstable and tip, which may cause personal injury or product damage.



STEEL SERVICE CART

DELUXE SERIES



SPECIFICATIONS

Overall size lid closed:.. 865 x 510 x 1050mm (LxWxH)

Overall size lid open: 865 x 510 x 1570mm (LxWxH)

Top compartment area: 650 x 480 x 120mm (LxWxD)
80kg load capacity

Drawer 1 & 2:..... 285 x 425 x 50mm (LxWxD)
20kg load capacity each

Drawer 3:..... 285 x 425 x 120mm (LxWxD)
40kg load capacity



Drawer 4: 620 x 425 x 70mm (LxWxD)
40kg load capacity

Drawer 5: 620 x 425 x 120mm (LxWxD)
40kg load capacity


Open bottom tray: 755 x 485 x 85mm (LxWxD)
80kg load capacity

Open side tray: 485 x 95 x 85mm (LxWxD)


Nett Weight: 61.6kg

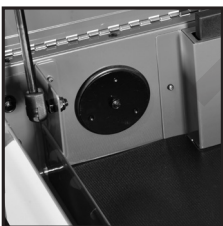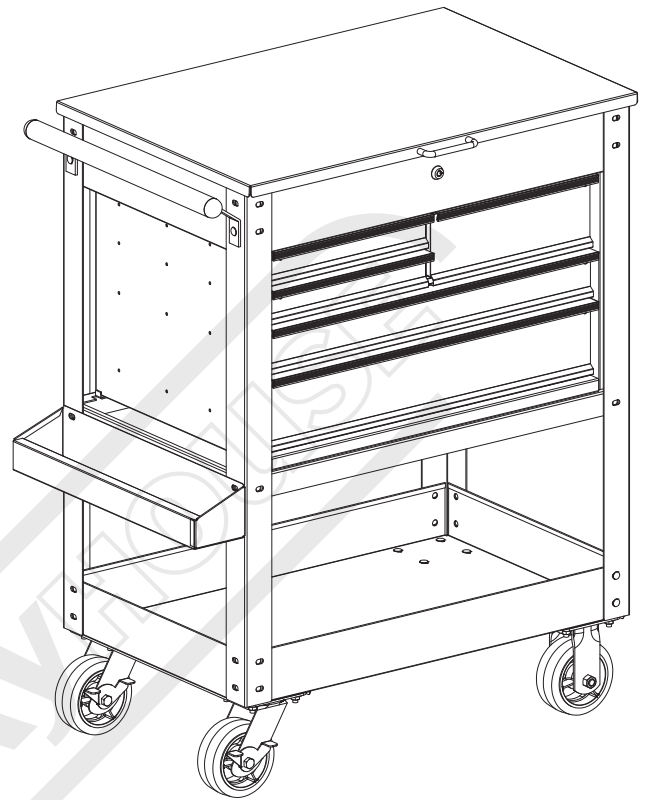

Cable Access
Points (x1)

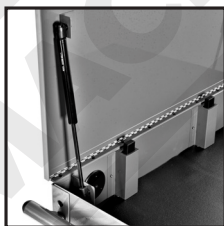


Gas Struts (x2)

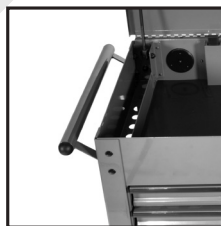

Heavy Duty
Handle (x1)



Keys (x4)

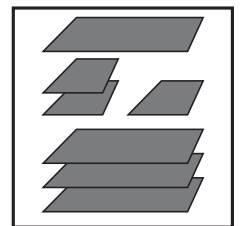

Foam Liners (x7)

KEY / LOCKING OPERATION

KEY LOCK - will lock the entire tool chest and drawers

LID CLOSED - will lock drawers via the rear locking system

STEEL SERVICE CART

DELUXE SERIES




DRAWER REMOVAL / RE-INSERTING

1.

Removing the drawers


- Fully extend the empty drawer.
- Push up the one release lever while pulling down on the other release lever.
- Pull the drawer outward until it is released from the drawer slide.

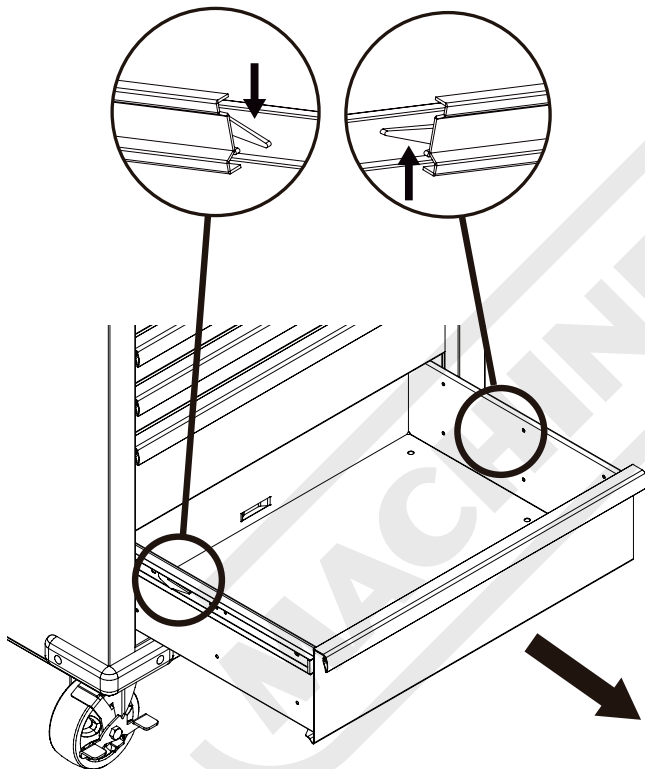

2.

Re-inserting the drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots in the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions and make sure you go all the way in to engage the firm close drawer system.

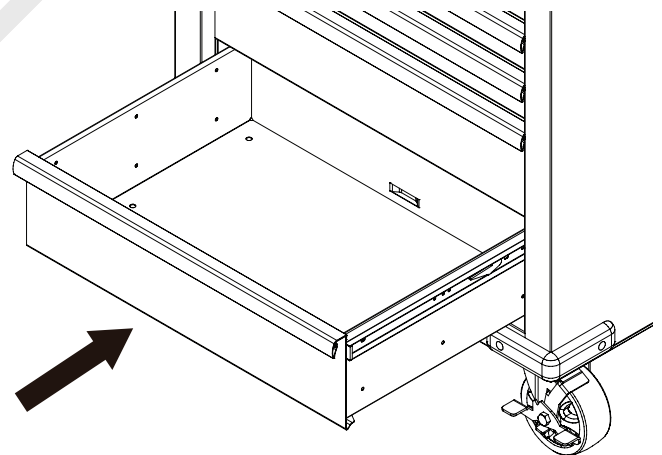

NOTE: Image is for illustrative purpose only and may not be an exact representation of the product.

MAINTENANCE


1. Wheel maintenance: Grease the wheels annually using high-quality bearing grease.
2. Drawer maintenance: Lubricate the slides semi-annually with high-quality bearing grease.
3. Lubricate the lock with graphite annually.

STEEL SERVICE CART

DELUXE SERIES

PARTS LIST

Carefully unpack and spread out all parts in a large uncluttered area. Familiarize yourself with all parts and compare them with the drawing below to make sure none are missing. Read all assembly instructions before beginning.

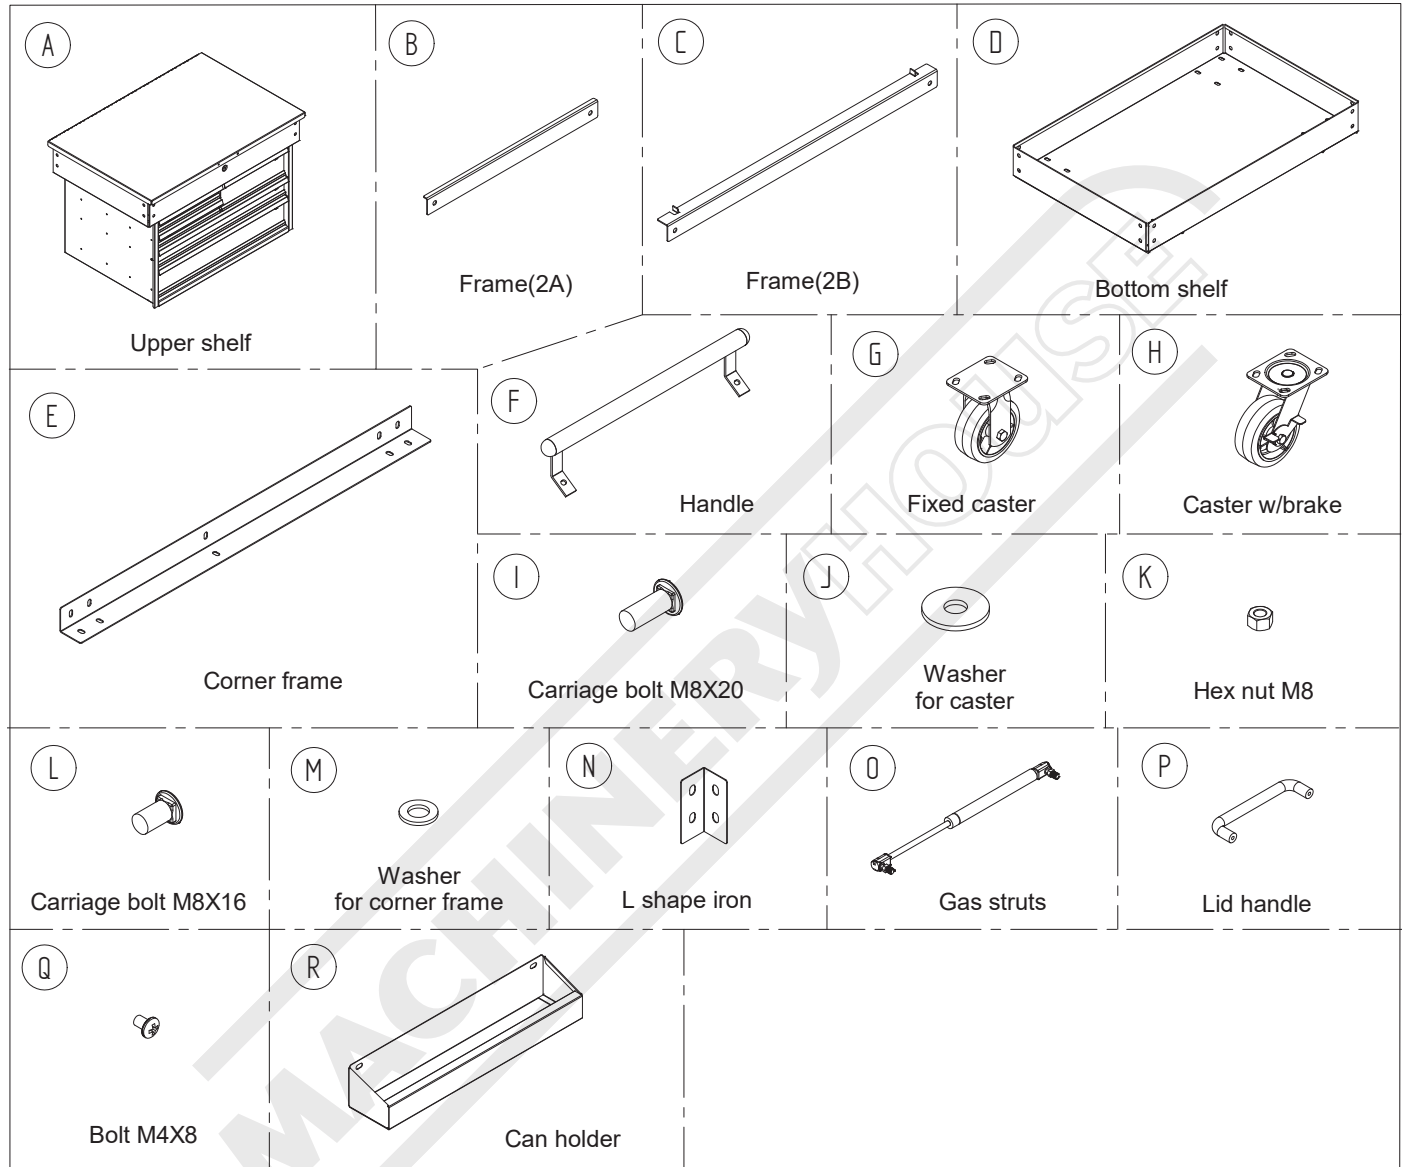

Item	Description	Q'ty	Item	Description	Q'ty	Item	Description	Q'ty
A	Upper shelf	1	G	Fixed caster	2	M	Washer for corner frame	40+2
B	Frame(2A)	2	H	Caster w/brake	2	N	L shape iron	4
C	Frame(2B)	2	I	Carriage bolt M8X20	18+1	O	Gas struts	2
D	Bottom shelf	1	J	Washer for caster	16+1	P	Lid handle	1
E	Corner frame	4	K	Hex nut M8	60+3	Q	Bolt M4X8	2
F	Handle	1	L	Carriage bolt M8X16	38+2	R	Can holder	1

TOOLS REQUIRED : #2 and #3 phillips screwdrivers
13mm wrench or socket for caster nuts and corner frame nuts

 
STEEL SERVICE CART

DELUXE SERIES



ASSEMBLY INSTRUCTIONS


TOOLS & ASSISTANCE NEEDED



13mm Spanner or Socket Wrench
#2 & #3 Philips Head Screwdrivers

*Tools not included

STEP 1

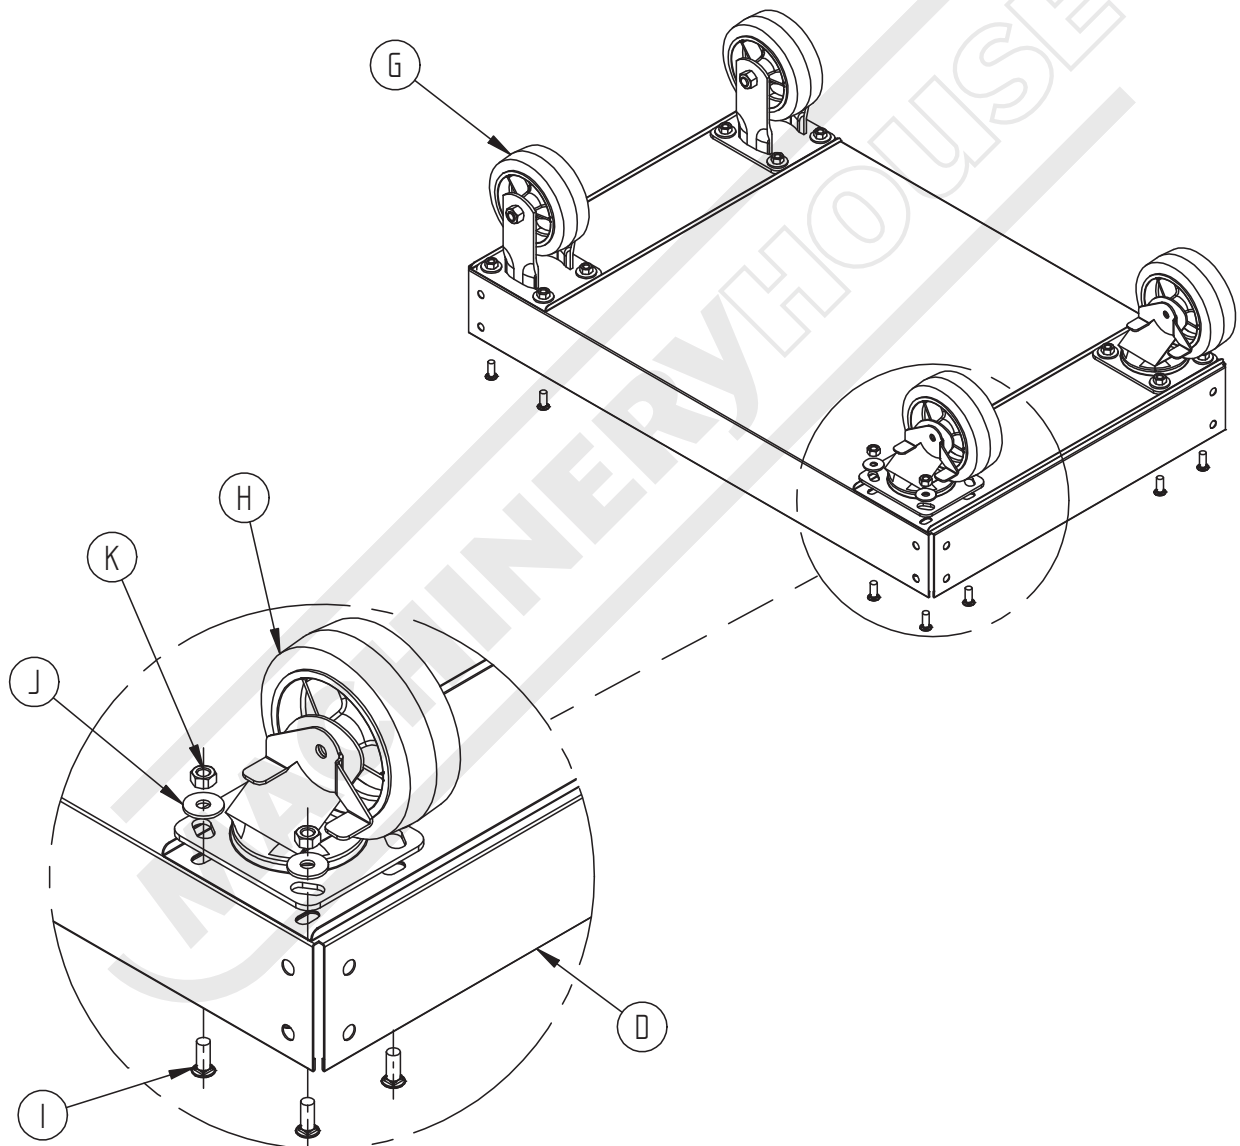


Using I, J and K attach 2 of G to other side of D.
Using I, J and K attach 2 of H to opposite under of D.

STEEL SERVICE CART DELUXE SERIES



ASSEMBLY INSTRUCTIONS Cont..

STEP 2

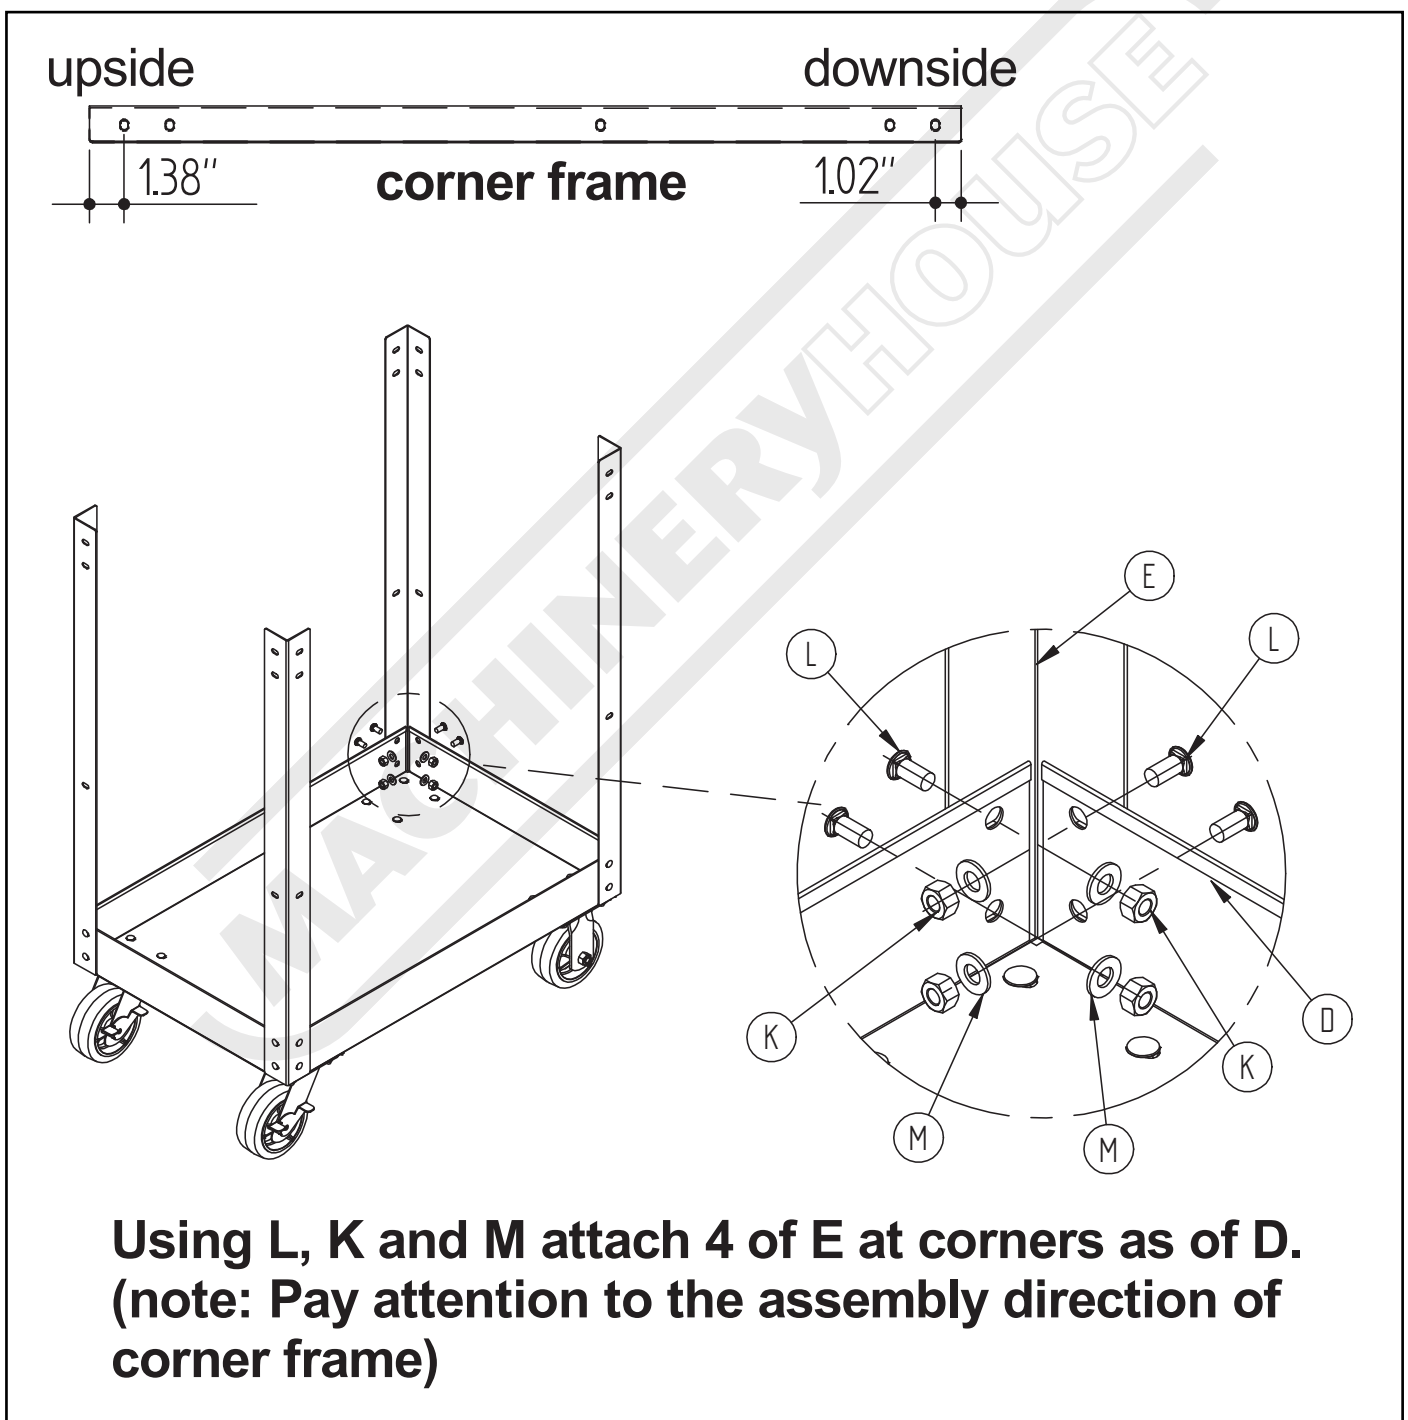


STEEL SERVICE CART DELUXE SERIES



ASSEMBLY INSTRUCTIONS Cont...

STEP 3

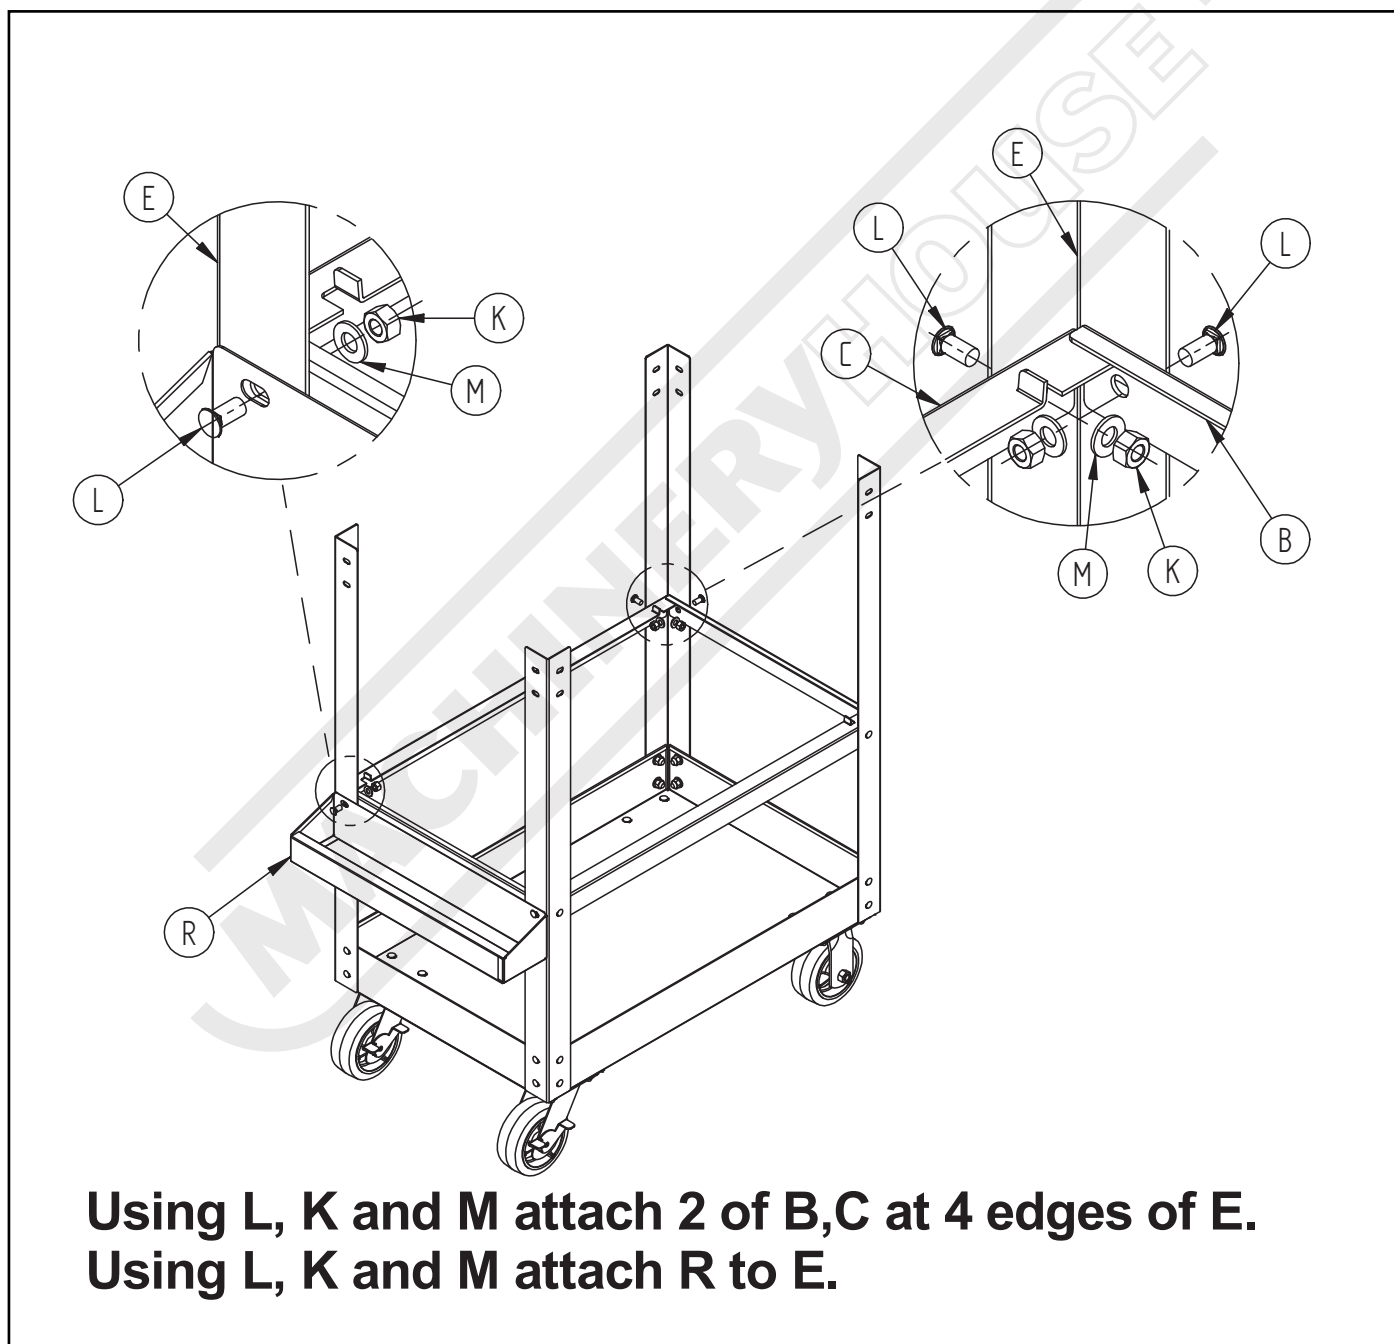


STEEL SERVICE CART DELUXE SERIES



ASSEMBLY INSTRUCTIONS Cont...

STEP 4

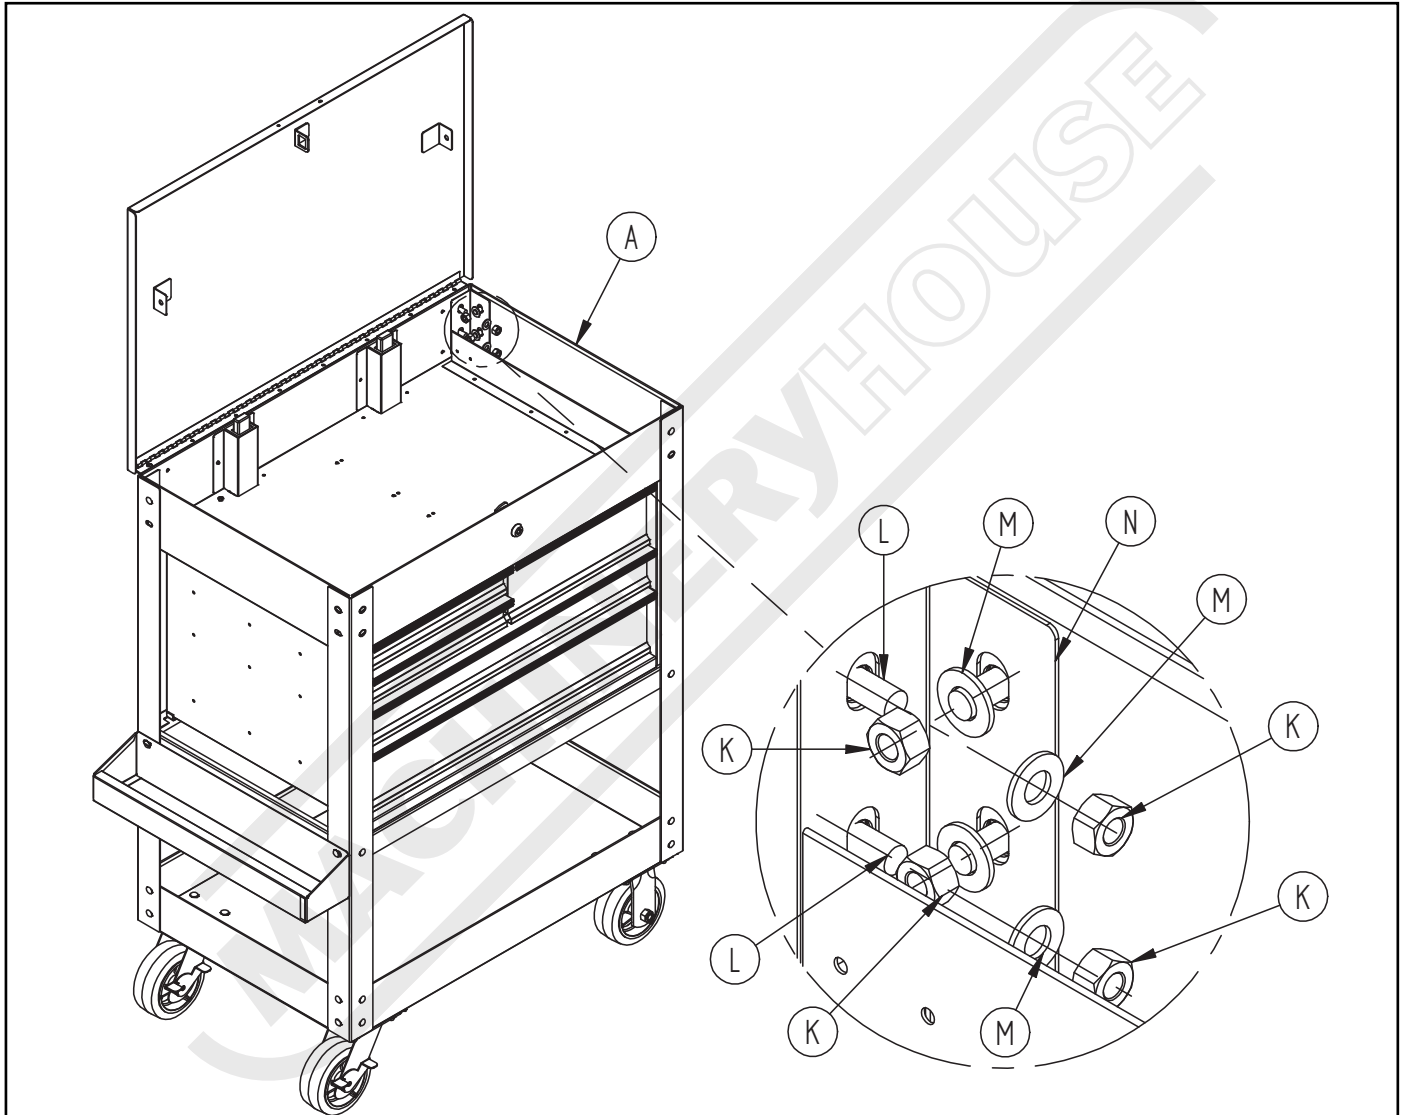


Place A on the E edges top, and add 4 of N at 4 corners, using L lower case letters and K, M to fix it. (note: leave 2 holes open for handle)

STEEL SERVICE CART DELUXE SERIES



ASSEMBLY INSTRUCTIONS Cont...

STEP 5

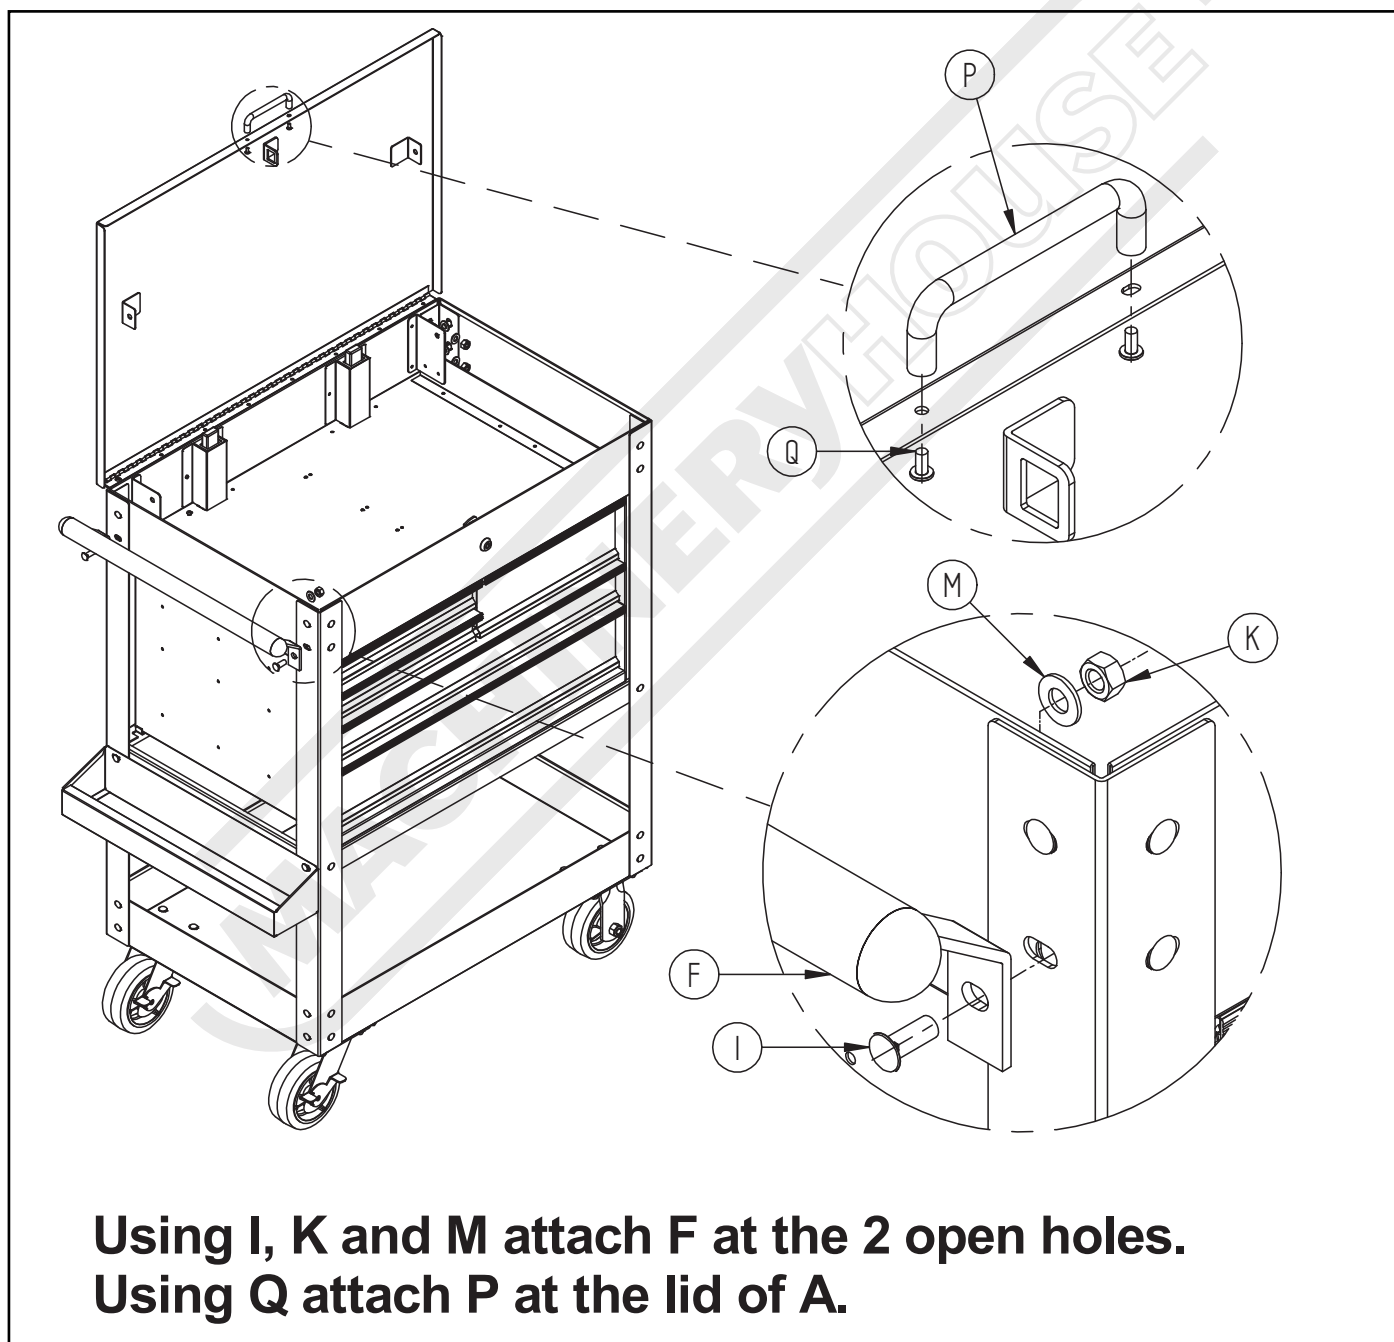


STEEL SERVICE CART DELUXE SERIES



ASSEMBLY INSTRUCTIONS Cont...

STEP 6

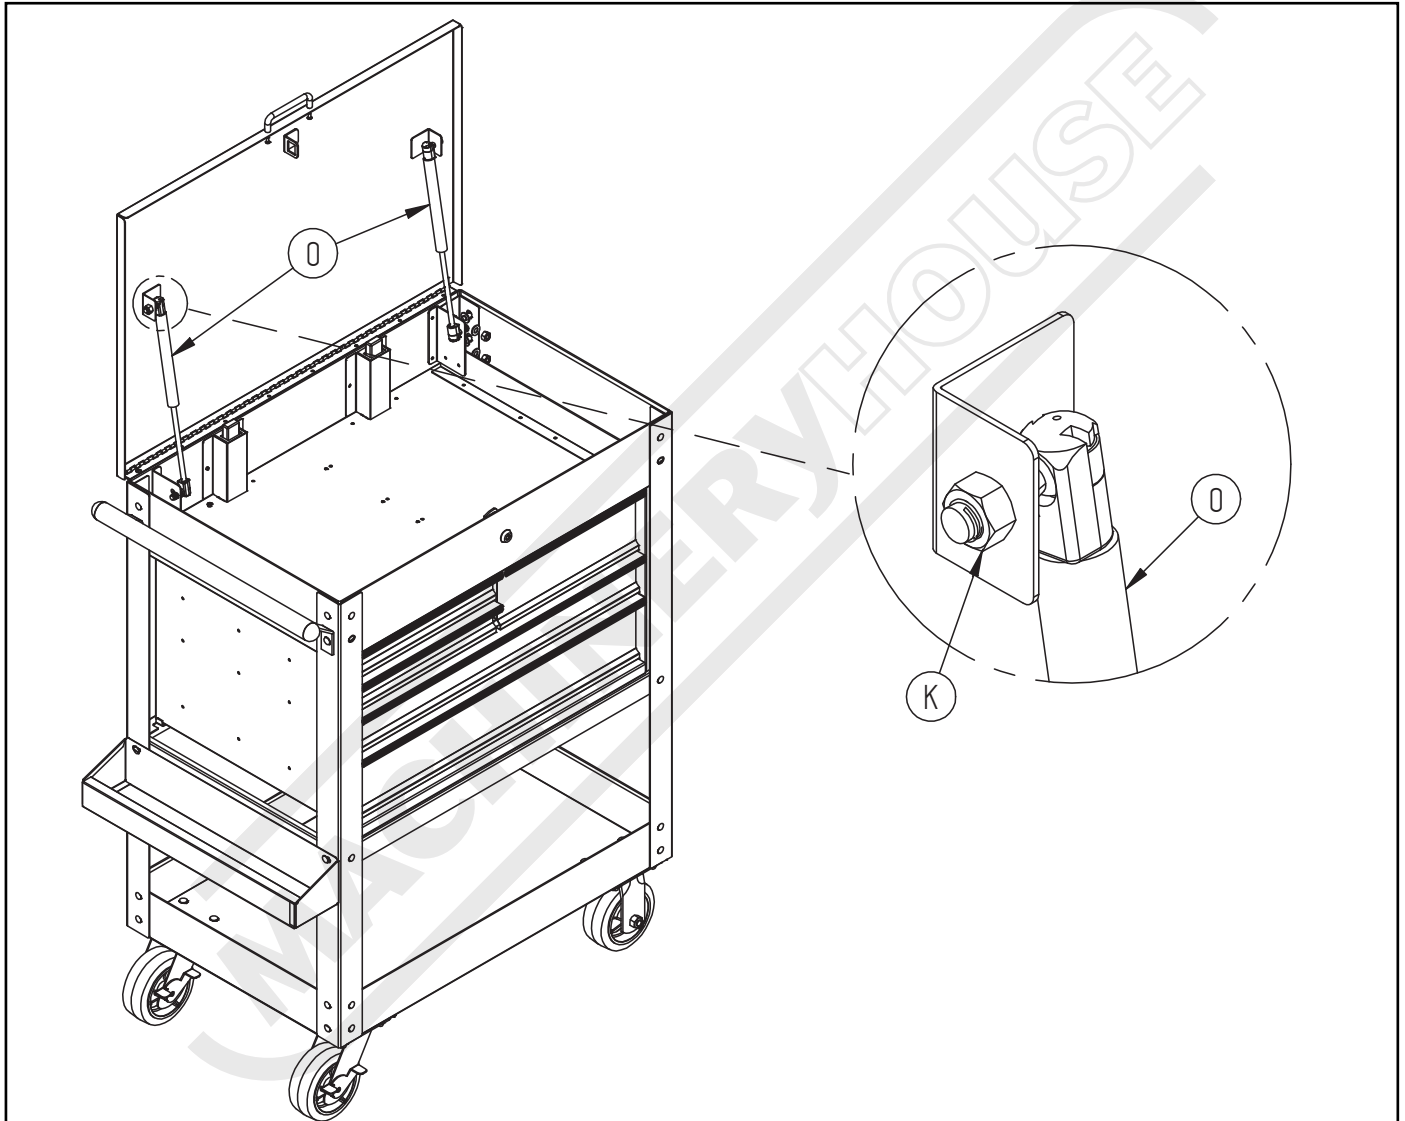

Using K attach 2 of O to A. Now you can tighten nuts/bolts fully starting from the bottom to the top.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Imported by

HARE & FORBES
MACHINERYHOUSE

Australian Distributor

Hare & Forbes
Machineryhouse
Sydney - Melbourne
Adelaide - Brisbane - Perth

Ph: 1300 202 200
www.machineryhouse.com.au

MACHINERYHOUSE

New Zealand Distributor

Machineryhouse
Auckland
Christchurch

Ph: 0800 142 326
www.machineryhouse.co.nz