



W740 setting "90 degree reset stop" for fence





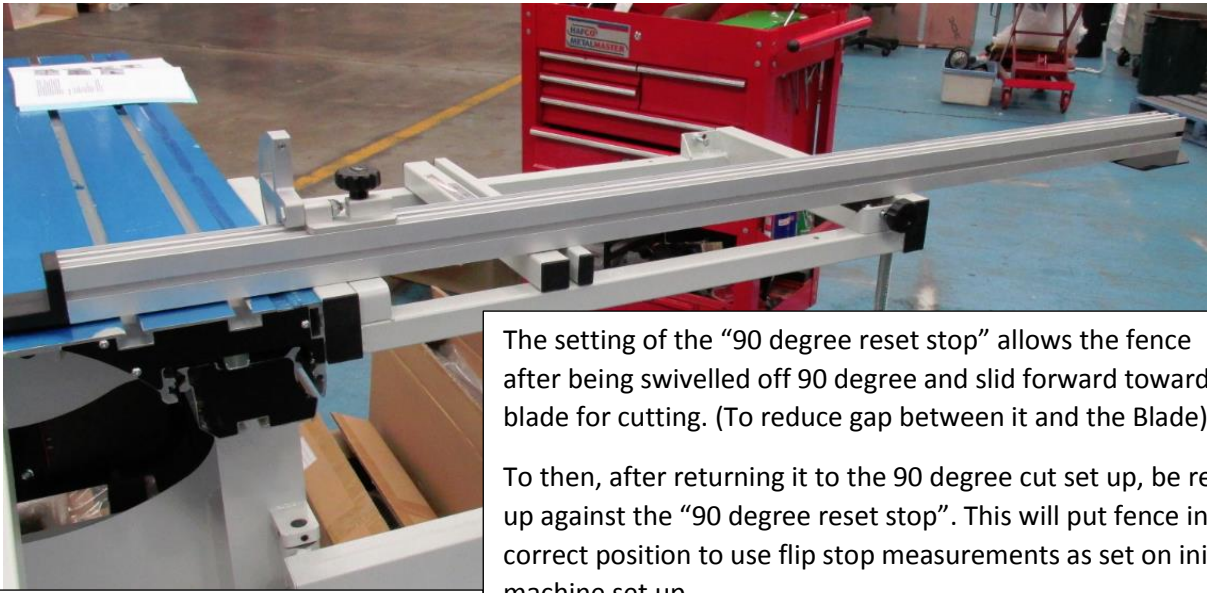


Fence set up assembly as shown below
Remove plastic LH end cap (2 screws) and slide parts on.

Position gets fixed when assembled on Cross Cut table

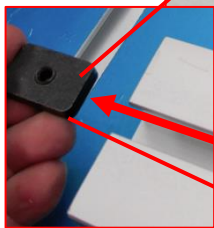

90 degree reset stop

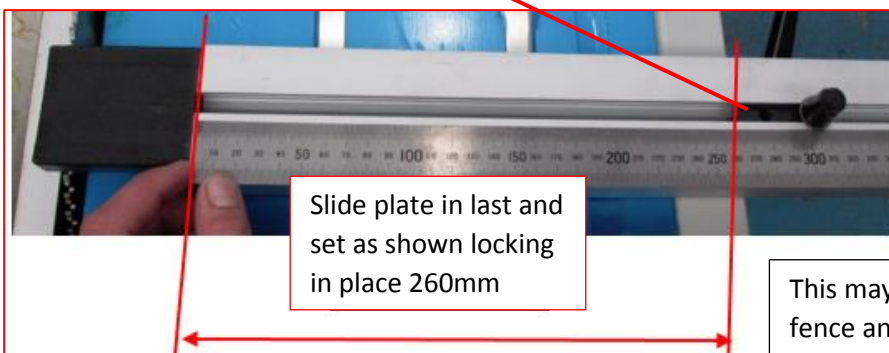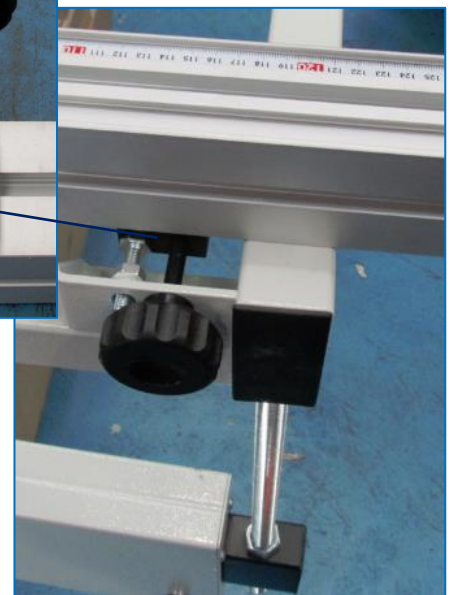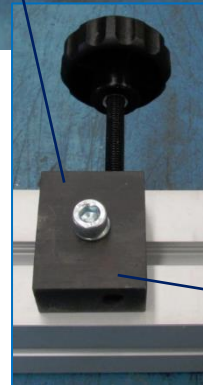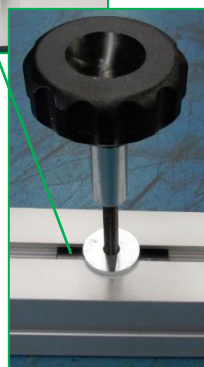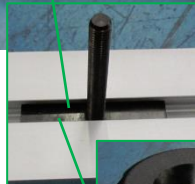

This may need final adjustment when fence and its scale is set up off blade to flip over stop and a cut is taken,